



User's Manual

1600 Watts, PBC – II Power Backup Cabinet

Doc #. 6002-1210
Revision A

**Installation and
Operating Documentation**

SAFETY

Safety precautions are important when operating or servicing electrical equipment. The following symbols are used extensively throughout this manual. Always read these precautions since they are essential to the safe operation and servicing of this product.



THIS WARNING SYMBOL IDENTIFIES A CONDITION OR ACTION WHICH WILL RESULT IN SEVERE INJURY OR DEATH TO AN INDIVIDUAL OR SEVERE DAMAGE TO EQUIPMENT OR OTHER PROPERTY.



This Caution symbol identifies a condition or action which may result in minor injury to an individual or minor damage to the equipment or other property.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This manual contains important instructions for the UPS that should be followed during the installation and for maintenance of the UPS, Electronic Tray, and the Batteries.

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should all always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- 1. DO NOT MOUNT NEAR GAS OR ELECTRIC HEATERS.**
- 2. EQUIPMENT SHOULD BE MOUNTED IN A LOCATION WHERE IT WILL NOT READILY BE SUBJECT TO TAMPERING BY UNAUTHORIZED PERSONAL.**
- 3. EQUIPMENT SHOULD BE KEPT UNDER LOCK AND KEY.**
- 4. ONLY QUALIFIED ELECTRICAL PERSONAL SHOULD BE PERMITTED TO MAINTAIN OR SERVICE EQUIPMENT.**
- 5. ONLY ACCESSORIES OR EQUIPMENT RECOMMEND BY MANUFACTURER SHALL BE USED WITH THIS EQUIPMENT, CONTACT FACTORY FOR APPROVAL.**
- 6. CHECK BY INSPECTION THAT ALL ELECTRICAL CONNECTIONS ARE CLEAN AND TIGHT.**

BATTERY SERVICING

1. Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
2. When replacing batteries, replace with the same number of the universal battery. (See Warning Label on the door of the unit)



- DO NOT MIX BATTERIES OF DIFFERENT MANUFACTURERS WITHIN THE SAME CABINET.
- AT INITIAL INSTALLATION: ANY FAILED BATTERY(S) SHALL BE REPLACED WITH THE SAME BRAND AND TYPE.
- AFTER UNIT IS PLACED IN SERVICE: ANY BATTERY(S) FAILURES SHALL REQUIRE THE REPLACEMENT OF ALL EIGHT (8) BATTERY(S).

Manufacturer

POWER BATTERY CO, BATTERIES ORDERABLE ITEM #300 317 948
C&D TECHNOLOGIES, BATTERIES ORDERABLE ITEM #300 327-764



Do not dispose of battery or batteries in a fire. The battery may explode.



Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

OnLine Power



A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:

- 1) Remove watches, rings, or other metal objects.
- 2) Use tools with insulated handles.
- 3) Wear rubber gloves and boots.
- 4) Do not lay tools or metal parts on top of batteries.
- 5) Disconnect charging source prior to connecting or disconnecting battery terminals.
- 6) Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source of ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock will be reduced if such grounds are removed during installation and maintenance (applicable to a UPS and a remote battery supply not having a grounded supply circuit).



“HIGH VOLTAGE 96 VDC” LABEL LOCATED NEAR BATTERY JACK ON FRONT PANEL OF ELECTRONIC TRAY.



**ENSURE CONNECTOR P3 / J3 ARE ALWAYS CONNECTED.
FAILURE TO COMPLY WILL OVERCHARGE AND DAMAGE BATTERIES.**



LABEL NEAR BATTERY AND ON DOOR INDICATES, “BATTERY IS HEAVY”. EACH BATTERY WEIGHTS 82 LBS. TWO PERSONS AND CAUTION ARE REQUIRED WHEN REMOVING BATTERY FROM CABINET.

OnLine Power



The Battery Voltage can cause the unit to operate with AC line power “OFF”. Care should be used at all times.



A Battery can present a risk of electrical shock and have a very high short circuit current.



- BATTERY SHELF LIFE, WHEN STORED UNDER TEMPERATURE CONDITIONS OF 66°F - 90°F, IS FIVE (5) MONTHS MAXIMUM AFTER THE SHIP DATE.
- BATTERY MUST BE RECHARGED AFTER THIS DATE OTHERWISE THEY WILL BE DAMAGED.
- DTHE SHIP DATE IS PART OF THE SERIAL NUMBER.

Example S/N 00 L7 02 00####
Year Month unit I.D. Number



Located near battery location. Battery terminals are coated with PRO-OX to seal and protect. PRO-OX contains petroleum distillates. WASH HANDS THOROUGHLY AFTER USE WITH SOAP & WATER. If ingested induce vomiting.



**RISK OF ELECTRIC SHOCK
LOCATED NEAR THE BATTERY LOCATION AND ON DOOR, “DO NOT TOUCH
UNINSULATED BATTERY TERMINAL”.**

OnLine Power



LIFTING - LOCATION FOR TWO EYE BOLTS ARE PROVIDED AT TOP. TWO EYEBOLTS WITH RUBBER WASHERS ARE PROVIDED IN A BAG INSIDE THE DOOR. DO NOT LIFT CABINET FROM TOP COVER. SEE THE PRE-INSTALLATION SECTION TO LIFT THE CABINET FROM PALLET USING FORK LIFT OR USING TWO EYE BOLTS AT TOP.



WEIGHT OF COMPONENTS

- . The cabinet weight is approximately 899 lbs with electronic tray.
- . The Electronic Tray weight is approximately 55 lbs.
- . Each of the eight (8) Batteries weighs 82 lbs.



 
DOOR STOP - Use Door Stop provided at the bottom lip of the door for human protection from wind etc..



All power to the unit shall be locked and tagged "OFF" before any servicing or other work on the unit.



The Battery/UPS door to the unit shall be locked and tagged "OFF" before any servicing or other work on the unit.

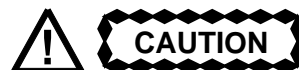

Provide about 6 feet of service loop for power cables, from stub out on a concrete slab or conduit for roof top application. This will facilitate wire routing in the unit.

OnLine Power



GROUNDING - SEE GROUNDING SECTION. CABINET MUST BE GROUNDED USING #2 AWG SOLID TINNED WIRE FROM GROUND ELECTRODE, CRIMPED AT GROUND PADS USING CABLE LUG AND HARDWARE SUPPLIED AND INSTALLED ON THE GROUND PADS.



RISK OR ELECTRIC SHOCK HAZARD LIVE PARTS INSIDE THE UPS . WHEN THE AC INPUT POWER IS DISCONNECTED, THE ENERGY IS SUPPLIED FROM THE BATTERIES.



THE OVERCURRENT PROTECTION FOR THE OUTPUT AC CIRCUIT IS TO BE PROVIDED BY OTHERS.



To disconnect all power in the PBC-II cabinet, turn-off Main Input Circuit Breaker CB1, Main Output Circuit Breaker CB2, Battery Breaker CB9 in the UPS cabinet and Battery Breaker, CB1 in the adjunct Battery cabinet. All the Breakers in the UPS and battery cabinet should be turned OFF by pushing handle downward.



Use either No 10 AWG, 60° or 75°C copper wire, or No 12 AWG, 60° or 75°C copper wire minimum to connect input and output AC power to the unit at terminal blocks. Local Code must be followed for sizing the wiring to the unit.

OnLine Power



**RISK OF ELECTRIC SHOCK AND FIRE
USE THE SAME TYPE AND RATING OF FUSE INDICATED TO REDUCE THE
RISK OF FIRE.**



**HIGH LEAKAGE CURRENT
EARTH CONNECTION ESSENTIAL BEFORE CONNECTING SUPPLY.**



**Located on the dead front of the Electronic Tray “ELECTRIC SHOCK HAZARD” -
Do not remove panel. Refer servicing to qualified service personnel.**



**Located on the dead front of the Electronic Tray, “Risk of electric shock hazard”. Live
parts inside the UPS are energized from the battery supply even when the A.C. Input Power
is disconnected.**

TORQUE VALUE

| TERMINAL or BOLT | TORQUE | |
|---|---------|---------|
| | IN/LBS. | N-METER |
| DEAD FRONT PANEL | 49.60 | 5.61 |
| TB1 | 18.0 | 2.03 |
| TB2 | 18.0 | 2.03 |
| ELECTRONIC TRAY GROUND | 14.16 | 1.6 |
| TRAY TO CABINET SCREW | 49.6 | 5.61 |
| CIRCUIT BREAKER, TERMINALS | 27.0 | 3.0 |
| SURGE PROTECTOR | 25.48 | 2.88 |
| CONDUIT INLET COVER PLATE OVER TORQUE WILL DAMAGE THE GASKET | 18.24 | 2.08 |
| BATTERY CONNECTIONS | 68.17 | 7.7 |
| DOOR GND | 49.60 | 5.61 |
| GROUND LUGS, ON OUTSIDE | 49.60 | 5.61 |
| PAD MOUNTING BRACKET | 84.96 | 9.6 |

This unit was designed for specific applications. It should not be modified and/or used for any application other than for that which it was designed. Optional equipment not described in the sales literature or this manual should not be installed without first checking with the Service department. If you have any questions about this unit's application call the Service department at the number shown on the page f.

OnLine Power

Congratulations on selecting one of the fine products from OnLine Power, the Leader in Power Protection Technology. Our wide product offering includes Uninterruptible Power Systems (UPS), Power Conditioners, Automatic Voltage Regulators and Specialty Transformers (e.g. computer-grade, medical-grade). Since our beginnings in 1975, OnLine Power has shipped thousands of these fine products around the world, to discerning customers, for use on sensitive equipment and critical applications. Our customers, both new and long-time, continue to enjoy security and peace of mind as they realize what it means to "Stay OnLine with On-Line Power".

One of our goals is to make these manuals both comprehensive and easy to use. This new-format Technical Manual is the result of ideas and inputs from customers who have taken an active interest in our continued success. We invite constructive feedback on our products and documentation via fax, mail or telephone.

HEADQUARTERS

On-Line Power, Inc.
5701 Smithway Street
Commerce, CA 90040

SALES

Phone (800) 227-8899
Inside CA (323) 721-5017
FAX No. (323) 721-3929

www.onlinepower.com
email: sales@onlinepower.com

SERVICE

Phone (800) 797-7782
(PWR - SRVC)
FAX No. (323) 721-3929

**OnLine Power, Inc.
Proprietary Reproduction or Distribution forbidden**

NOTICE: THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION

This document contains proprietary and confidential information of OnLine Power, Inc. ("OnLine Power"). In consideration of the receipt of this document, the recipient agrees not to copy any of its contents, nor disclose them to or allow them to be used by any person not currently a OnLine Power employee or an employee of the recipient having a need to know, without the express written consent of OnLine Power, and further agrees to surrender this document to OnLine Power when the reason for its receipt has terminated.

TABLE OF CONTENTS

| <u>SECTION</u> | | <u>PAGE</u> |
|---|--|-------------|
| SECTION 1 - OPERATION | | 1-1 |
| 1-1 | OVERVIEW | 1-1 |
| 1-2 | FEATURE | 1-1 |
| 1-2-1 | Alarm Signals | 1-2 |
| 1-2-2 | Alarm Cables | 1-3 |
| 1-2-3 | Intrusion Switch | 1-3 |
| 1-2-4 | ESD Receptacle and Wrist Strap | 1-4 |
| 1-3 | RUGGEDIZATION FEATURE | 1-4 |
| 1-3-1 | Wide Temperature Range | 1-4 |
| 1-3-2 | Shock and Vibration | 1-4 |
| 1-3-3 | High Input Voltage Surge Withstand Capability | 1-4 |
| 1-3-4 | Corrosion Resistant Cabinet | 1-4 |
| 1-3-5 | Rain-Proofed Cabinet | 1-4 |
| 1-3-6 | Easy Front Door Access | 1-4 |
| 1-4 | MOUNTING FEATURE | 1-5 |
| 1-5 | SAFETY AND EMI REGULATORY ASPECTS | 1-5 |
| 1-6 | OTHER IMPORTANT DESIGN FEATURES | 1-5 |
| 1-6-1 | Modularity of Internal Components | 1-5 |
| 1-6-2 | Electronic Tray | 1-5 |
| 1-6-3 | Battery | 1-6 |
| 1-6-4 | Temperature Compensated Fast Battery Charger (A7 PCBA) | 1-6 |
| 1-6-5 | External Padlock | 1-6 |
| 1-6-6 | Over Temperature Shutdown | 1-7 |
| 1-6-7 | Over Current Protection | 1-7 |
| 1-6-8 | Auto Bypass Feature | 1-7 |
| 1-6-9 | System Operation | 1-7 |
| 1-7 | ELECTRICAL - INPUT/OUTPUTS | 1-8 |
| 1-8 | MECHANICAL OVERALL OUTLINE | 1-8 |
| 1-9 | THEORY OF OPERATION | 1-9 |
| SECTION 2 - PREINSTALLATION | | 2-1 |
| 2-1 | SITE PLANNING AND PREPARATION | 2-1 |
| 2-2 | POSITIONING | 2-1 |
| 2-3 | SITE PLANNING SPECIFICATIONS | 2-1 |
| 2-4 | SITE DETAIL ELECTRICAL SPECIFICATIONS | 2-2 |
| SECTION 3 - INSTALLATION AND OPERATION | | 3-1 |
| 3-1 | PBC-II UNPACKING | 3-1 |
| 3-2 | INSPECTION | 3-1 |
| 3-3 | PBC-II STORAGE | 3-2 |
| 3-4 | PBC-II INSTALLATION | 3-2 |
| 3-5 | LIFTING REQUIREMENTS | 3-3 |
| 3-6 | PBC-II POLE INSTALLATION | 3-3 |
| 3-7 | POWER BACKUP CABINET TO POLE GROUNDING | 3-5 |
| 3-8 | POWER BACKUP CABINET GROUNDING TEST | 3-5 |
| 3-9 | PBC-II CONDUIT INSTALLATION | 3-6 |
| 3-10 | ELECTRONIC TRAY WIRING | 3-6 |

OnLine Power

REV A

| <u>SECTION</u> | <u>PAGE</u> |
|--|-------------|
| SECTION 3 - INSTALLATION AND OPERATION (Continued) | |
| 3-11 INPUT AND OUTPUT WIRING (TB1) | 3-6 |
| 3-12 WIRING FOR OPTIONAL BATTERY HEATERS | 3-8 |
| 3-13 ELECTRONIC TRAY, WIRING CHECK OUT | 3-9 |
| 3-14 PBC-II BATTERY CONNECTION | 3-9 |
| 3-15 PBC-II POWER UP PROCEDURE | 3-9 |
| 3-16 PBC-II BATTERY BACK-UP OPERATION TEST | 3-9 |
| 3-17 PBC-II PAD LAYOUT | 3-10 |
| SECTION 4 - SERVICING THE PBC-II | 4-1 |
| 4-1 THE MODULARITY OF INTERNAL COMPONENTS. | 4-1 |
| 4-2 SERVICING (STARTS WITH SAFETY) | 4-1 |
| 4-3 REMOVAL OF ELECTRONIC TRAY FOR SERVICING | 4-2 |
| 4-4 REPLACING OF ELECTRONIC TRAY | 4-2 |
| 4-5 BATTERY REMOVAL AND SERVICING | 4-2 |
| 4-6 REPLACING BATTERY | 4-3 |
| APPENDIX | |
| Appendix A. SUMMARY OF INDICATORS AND CONTROLS . | A-1 |
| Appendix B. INSTALLATION ACCESSORY KITS . | B-1 |
| Appendix C. BATTERY MAINTENANCE TESTING AND SPECIFICATIONS . | C-1 |
| Appendix D. TROUBLESHOOTING. | D-1 |
| Appendix E. SUMMARY OF ALL ALARMS AND FUNCTIONS . | E-1 |

LIST OF ILLUSTRATIONS

| <u>ILLUSTRATION</u> | <u>PAGE</u> |
|---|-------------|
| 1-1 STATUS PANEL | 1-2 |
| 1-2 DB9 CONTACTS | 1-2 |
| 1-3 BATTERY TRAY | 1-6 |
| 1-4 POWER BACKUP CABINET OVERALL DIMENSIONS | 1-8 |
| 1-5 PBC-II SYSTEM SCHEMATIC DIAGRAM (120 VOLT UNIT) | 1-9 |
| 1-6 PBC-II SYSTEM SCHEMATIC DIAGRAM (230 VOLT UNIT) | 1-10 |
| 1-7 BATTERY CABINET SCHEMATIC DIAGRAM (120 VOLT UNIT) | 1-11 |
| 1-8 BATTERY CABINET SCHEMATIC DIAGRAM (230 VOLT UNIT) | 1-11 |
| 2-1 PBC-II FRAME FABRICATION DETAIL | 2-2 |
| 3-1 PBC-II POLE MOUNTING | 3-4 |
| 3-2 CABINET CONDUIT LOCATION | 3-6 |
| 3-3 CONNECTIONS AT TB1 OF MAIN UPS CABINET | 3-7 |
| 3-4 CONNECTIONS TO ADJUNCT BATTERY CABINET | 3-8 |
| 3-5 WIRING FOR OPTIONAL BATTERY HEATERS | 3-8 |
| 3-6 PBC-II LAYOUT | 3-10 |
| 4-1 FRONT VIEW | 4-1 |

SECTION 1 - INTRODUCTION

1-1 OVERVIEW

Within each Power Backup Cabinet is an Uninterruptible Power Supply (UPS). The purpose of this device is to provide power to the critical load during brown out, or black out conditions, without disruption of operation of the load equipment. When the unit operates in the backup mode, the AC power for the load comes from a set of internal batteries and Inverter. The battery charger keeps the batteries charged and ready to fulfill the unit's function to supply reserve power.

Also, PBC-II cabinet provides an additional level of power protection from transients, surges, electrical noise, and other power disturbances.

What differentiates this PBC-II from, off-the-shelf, UPS equipment is the high level to which these units have been "hardened" (ruggedized) to ensure continuous operation in very harsh environments, particularly outdoors.

1-2 FEATURES


Status Indicators

The unit has two major components, the Electronic Tray and Battery. The Electronic Tray contains the battery charger, breakers, receptacles, LED status panel, Inverter circuitry, and the input/output terminals. Each of the two lower tray holds four batteries on each shelf. The lights on the LED status panel (at the front panel display) indicates the unit's operational mode. (See Illustration 1-1 below) These lamps provide a positive visual indication of specific aspects of the unit's functional operation. These are as follows:

| | |
|-------------------------------------|---|
| OVERLOAD (Red LED) | The output load is over 100% of rated load. |
| 100% (Green LED) | Full load of 100% rating. |
| (Green LED) | 75% of rated load. |
| (Green LED) | 50% of rated load. |
| 25% (Green LED) | 0 to 25% of rated load. |
| SUMMARY ALARM (Red LED) | Illuminates when unit shutdown alarm condition is present such as over temp., output short circuit, output overload, & DC overvoltage |
| HIGH BATTERY CAPACITY (Green LED) | Indicates the batteries are fully charged |
| MEDIUM BATTERY CAPACITY (Green LED) | Indicates the batteries are half charged |
| LOW BATTERY (Red LED) | Indicates the battery is approaching low shutdown level. |
| ON BATTERY (Green LED) | Indicates the battery is ON, and output is supplied from battery. |
| BYPASS ON (Green LED) | Indicates the unit is running with AC input power in OFF Line, AC Mode, in Bypass. |
| INVERTER ON (Green LED) | Indicates the unit is running with the battery power in Inverter mode. |
| INPUT AC ON (Green LED) | Indicates the input power is present. |
| UPS OFF S1 | Used only to shut-off UPS when unit is running in DC mode. |
| UPS ON S2 | Used only to turn on UPS when unit is running in DC mode. |

OnLine Power

REV A

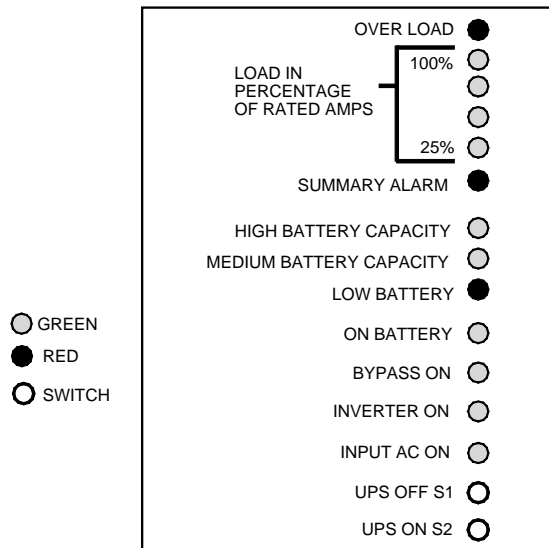


ELECTRONIC TRAY - STATUS PANEL
ILLUSTRATION 1-1

In the normal running condition, "Input AC ON" (Green LED) and "Bypass ON" (Green LED) is lit ON indicating that input AC power is available and unit is running in AC mode (Off-Line), in Bypass mode. When input power is lost or disappears, "Input AC ON" green LED shuts OFF, "Bypass ON" green LED shuts OFF. "ON Battery" and "Inverter ON" green LEDs lit ON indicating that output power is supplied from battery & inverter (unit is running on battery and inverter).

1-2-1 Alarm Signals

Also providing information on the unit's status/particular aspects to the outside world by way of electrical signals is a DB-9 connector. This DB-9 connector is located on the front console of the Electronic Tray. This interface provides a set of open and closed contacts, which relate the status of PBC-II to the outside world. An interface DB-9 connector and cable permit the unit to bring out following signals with their normal state (open or closed). The contacts (Normally Open or Normally Closed) is shown when unit is running in normal condition (i.e. with input power present and everything normal within limit).

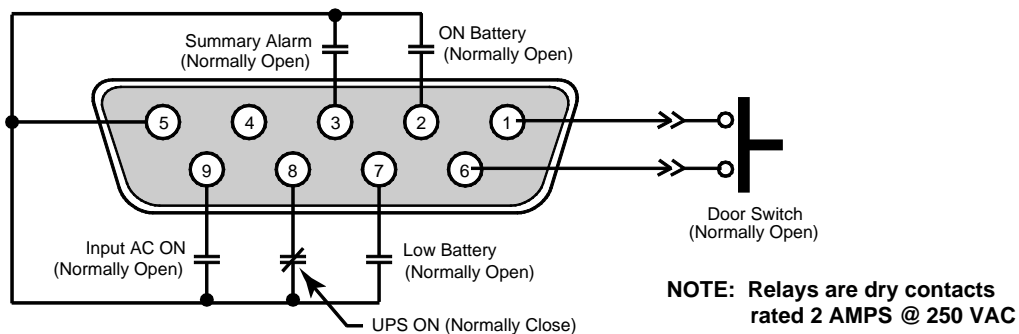

DB9 CONTACTS
ILLUSTRATION 1-2

OnLine Power

REV A

| DB9 Pin Numbers | UPS Power-Off, all CB's open condition | Normal Operating Condition (Input AC On, UPS On) | Failure/Alarm Condition | Alarm Description |
|-----------------|--|--|---|---------------------------------------|
| 3 to 5 | OPEN | OPEN | CLOSE, Latched (for short circuit and overload) | Summary Alarm |
| 7 to 5 | OPEN | OPEN | CLOSE | Low Battery |
| 2 to 5 | OPEN | OPEN | CLOSE (UPS battery on) | On Battery |
| 8 to 5 | OPEN | CLOSE | OPEN (UPS OFF) | UPS On ("bypass on" or "inverter on") |
| 9 to 5 | CLOSE | OPEN | CLOSE (input power-off) | Input AC ON |
| 1 to 6 | OPEN for door close | OPEN | CLOSE (door open) | Intrusion Door Switch |

- For the detailed pin out for the DB-9 connector see Illustration 1-2 and table below.

1-2-2 Alarm Cables

The PBC-II units come with an Alarm Cable, 20 feet long, which connects to the "DB-9 jack" at the electronic tray, below TB1, so the signals are available for external monitoring/status reporting equipment. The wiring of the cable matches the pin out detail as shown in Illustration 1-2 for the DB-9 jack.

| DB9 Pin Out | Wire Color | Function | Contact Position with Power OFF |
|-------------|------------------------|-------------------------------|---------------------------------|
| 1 | Black of Black / Blue | Door Switch, Intrusion Alarm | Normally Open |
| 2 | Black of Black / Red | ON BATTERY(*) | Normally Open |
| 3 | Black of Black / White | Summary Alarm Warning | Normally Open |
| 4 | | Open no wire | N/A |
| 5 | Black of Black / Green | Return Common | Ground |
| 6 | Blue of Black / Blue | Door Switch, Intrusion Switch | Normally Open |
| 7 | Red of Black / Red | Low Battery | Normally Open |
| 8 | White of Black / White | UPS "ON" / Inverter "ON" | Normally Open |
| 9 | Green of Black / Green | Input Failed | Normally Closed |

(*) NOTE: Disregard the "FLASH" label attached to the wire connected at DB9 pin #2, in the unit.

1-2-3 Intrusion Switch

An intrusion alarm switch resides within the cabinet to relay that the unwanted entrance into the cabinet has been made. The plunger of the switch is in by the door when it's closed. In this condition, the switch presents an open circuit and the alarm is in the "off" state. When the door is open, the switch presents a closed circuit with a pulled out plunger and the alarm is in the "on" state. One additional state is available on the switch. A technician working on the unit can pull the plunger completely out to a "neutral" position. The switch will be in the open state ("off") and thus no alarm condition by-passed while he or she is working on the unit. See Illustration 1-3 for its location.

OnLine Power

REV A

1-2-4 ESD Receptacle and Wrist Strap

The ESD wrist strap plugs into the red connector receptacle on the front panel of the Electronic Tray. An ESD wrist strap is in the bottom of the cabinet. Any personnel working on the unit should be wearing the strap. The strap plugs into the RED banana plug receptacle to minimize the risk of damage to the ESD sensitive circuitry that of the electronics assembly.

1-3 RUGGEDIZATION FEATURES

All PBC-II are designed to operate in most outdoors harsh environments. The unit has been subjected to outside independent labs to demonstrate that they are capable of withstanding severe outdoors operating conditions. Below is a listing of many of those conditions:

1-3-1 Wide Temperature Range

The PBC-II designed and tested to operate in the outdoors over a wide range of temperatures, from -40°C to +46°C plus a solar load of 70 watts/sq.ft. The PBC-II unit has option of having internal heaters for the batteries to allow it to operate over a range of -40°C to +46°C.

1-3-2 Shock and Vibration

These devices are designed and tested to meet Bellcore specs for shock and vibration namely GR-63-Core Issue 1 section 4.3 and GR-63-Core issue 1 section 4.4 and earthquake zone 4.

1-3-3 High Input Voltage Surge Withstand Capability

The unit internally has AC Surge protector (ACT's TVSS) to ensure that lightning or other types of high voltage surges do not damage them. They meet IEEE 62.41 1991 (UL1449) level C3 input voltage surge, of 20,000 Volts @ 10,000 Amps.

1-3-4 Corrosion Resistant Cabinet

The cabinet is aluminum - anodized and painted on the exterior. It is a sealed cabinet having drain holes at the bottom and vents for hydrogen gas at top.

1-3-5 Rain-Proofed Cabinet

The cabinets designed and tested to meet UL50 (Type 3R) and IEC60529 (IP34) requirements and thereby to ensure that rain will not reach the critical electronics.

1-3-6 Easy Front Door Access

This makes for effective field service access.

OnLine Power

REV A

1-4 MOUNTING FEATURES

Pad or Floor Mounting

PBC-II shall mount on a concrete pad, outdoor/indoor. The pad rail mounting comes with the hardware required. The rails can be in-line with door or crossways to door.

Pole or Wall Mounting

PBC-II can be Pole or Wall mounted. The mounting brackets are optional and need to be ordered. Select options at the time of purchase of individual units. The part numbers for these options are part of Appendix B of this manual.

1-5 SAFETY COMPLIANCES

The PBC-II units are UL listed and evaluated for compliance to standards for UL 1778 and cUL listed and evaluated for compliance to standards for CAN/CSA - C22.2-107.1.

The unit is evaluated by UL for outdoor use to be type 3R (for North American) and IP34 (for International)

The PBC-II units are tested and evaluated to be in compliance by ITS for followings

- IEC 60950
- IEC 600529 (IP34)
- EN 55022 (CISPR)
- GR-1089-CORE: 1997 (Section 3, Radiated immunity and conducted immunity)
- IEC 61000-4-2: 1999
- IEC 61000-4-3: 1998
- IEC 61000-4-5: 1995
- IEC 61000-4-6: 1996
- CFR NO. 47 Telecommunication: Oct 1, 1999 FCC Part 15, Subpart B, Class B

1-6 OTHER IMPORTANT DESIGN FEATURES

1-6-1 Modularity of Internal Components

The cabinet contains two physical assemblies; The Electronic Tray and Individual Batteries.

The Electronic Tray contains the UPS System.

1-6-2 Electronic Tray

The electronic tray can be accessed after removal of front panel, held by 4 captive screws in four corners. The electronic tray consist of two levels and a front section. The front section contains breakers, receptacles, display lights etc... The two levels inside contains UPS and electronics. Details of the connectors are shown in Section 3 for electrical wiring of unit.

OnLine Power


REV A

1-6-3 Battery

The batteries are on two level compartments and supplying 96 VDC to UPS. There is an optional Adjunct Battery Cabinet with 8 batteries that are mounted in two trays, supplying 96 VDC nominal to UPS.

The batteries are mounted on the two level compartments and supplying 96VDC to UPS. Use quantity of 8x120A/H or 8x100AH batteries. There is a heater option to ensure operation down to -40 degree C. temperature. The total number of heater pad assembly is 4.

The simplified construction into two major components makes for fast and easy repair of the unit in the field where the batteries, and Electronics Tray composes the only FRU items within the unit.

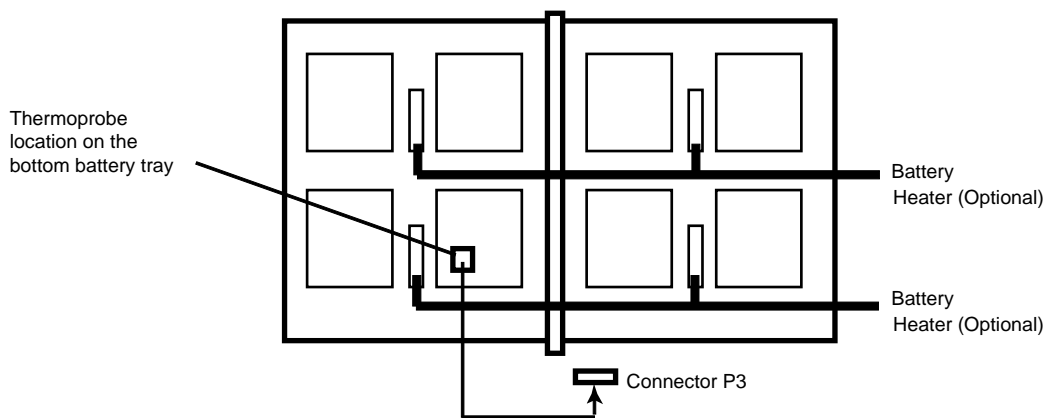

BATTERY TRAY
ILLUSTRATION 1-3

1-6-4 Temperature Compensated Fast Battery Charger (A6-A PCBA)

The Fast Charger will charge the batteries when discharged, as well as to keep the batteries charged. The recharging time varies based on the backup time and the critical load supported by the batteries during the input power outage.

The thermoprobe located on bottom battery tray and as shown above in Illustration 1-3, monitors the battery temperature and compensate the battery charging voltage out of the battery charger. The connector for the thermoprobe, J3/P3 must be connected at all times. The batteries will be overcharging if J3/P3 connector is left open and eventually batteries will be damaged, since this condition is not reported by any alarms. When the temperature at battery case is very low, as sensed by the thermoprobe, the charger will charge the batteries at higher voltage. When the battery case temperature is sensed high by thermoprobe, the charger reduces the charging voltage.

1-6-5 External Padlock

The cabinet possesses an external padlock receptacle to prevent unauthorized personnel from gaining access to the interior of the cabinet via the front door when used in conjunction with a customer supplied padlock.

OnLine Power

REV A

1-6-6 Over Temperature Shutdown

While the PBC-II has several internal fans operating when the PBC-II & UPS is "ON" to prevent an overheating condition, further protection has been built into the UPS to ensure against circuit failure due to internal overheating. If there is an Over Temperature condition, the UPS shall shut down. It has an auto-recovery feature, so that when the temperature reaches a safe level, the UPS will come back on. There is a built-in hysteresis feature to prevent any oscillatory condition of the UPS turning "ON" and "OFF" at the Over Temperature trip point from taking place. For overtemperature alarm condition and description, see Appendix A and E at the end.

1-6-7 Over Current Protection

If there is an overload or loads draw excessive output current from the PBC-II. The sensing circuit in the Inverter will provide feedback to cause the Inverter to limit the current and thereby prevent the unit from being damaged due to such a condition. For overload of over 160% of rated capacity, unit will shut down and/or trip breakers, same as in output short circuit condition. For overload of 120% to 160% of rated capacity, "Summary Alarm" comes ON and the unit may support the output load via automatic bypass circuit. See Appendix E at the end for details.

1-6-8 Auto Bypass Feature

This feature allows input power to bypass the electronics and UPS automatically. It detects the low or no output voltage of the UPS and energizes the autobypass relay, whose contacts provides output power (from input or battery, i.e. in AC or DC mode) to the main output breaker. The relay deenergizes or opens when output power falls below the limit or disappears for any of the reason (such as overtemperature or any failure), thereby disconnecting the UPS from output circuits. The normally close contacts of this relay provides input power to the output circuit with this feature. As long as input power is available, it is provided to output circuits for continuous operation of microcells, even though UPS may have been shut-off indicating "Summary Alarm" in the unit as well as in central station via DB9 cable. See Appendix A and E for "Customer Action" under "Summary Alarm Conditions".

1-6-9 System Operation

This PBC-II is supplying the power to critical load through bypass circuit directly by the input power source as long as the input voltage range is within the voltage specification such as 85 V - 130 V for 120 Volt unit, 180 V - 264 V for 230 Volt unit. When the input voltages are out of the above specifications or fails, the unit will automatically transfer to the battery and inverter to supply the critical load. When the input comes back to normal, then unit will supply critical load automatically from the input source.

The transferring time from input power to battery or battery to input power is within 4.2 - 10 milliseconds at 100% load condition.

OnLine Power

REV A


1-7 ELECTRICAL - INPUT/OUTPUTS

All models are single phase input and outputs.

| Model | AC Mode (Normal Off-line Operation) | |
|-------------------------------------|-------------------------------------|------------------|
| | 120 V, 50/60 Hz | 230 V, 50/60 Hz |
| Rating | 1600 W | 1600 W |
| Input Voltage | 120 VAC | 208 - 240 VAC |
| Input/Output Frequency | 47-53 / 57-63 Hz | 47-53 / 57-63 Hz |
| Input Breaker (CB1) | 32 Amps | 16 Amps |
| Output Voltage | 120 VAC | 208 - 240 VAC* |
| Main Output Breaker (CB2) | 20 Amps | 10 Amps |
| RCD/GFCI Breaker (CB3) | 16 Amps | 16 Amps |
| Secondary Output Breakers (CB4-CB7) | 20 Amps | 10 Amps |

*The output voltage in DC mode (Battery Back-up Operation), will be 230 VAC.

1-8 MECHANICAL OVERALL OUTLINE

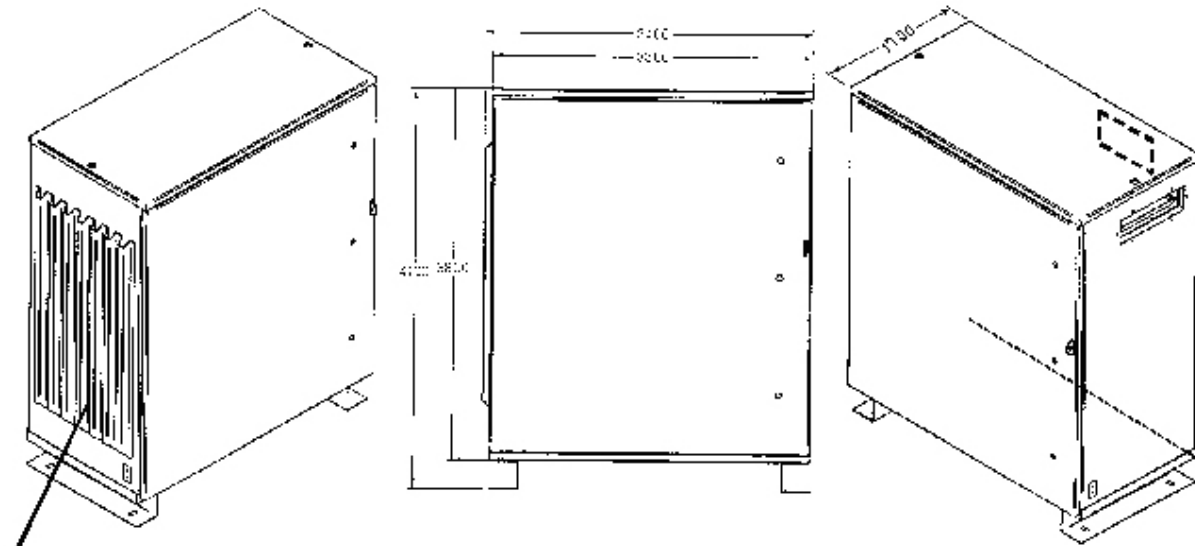

These external aluminum heatsink (vertical fins) are not provided for the optional Adjunct Battery Cabinet.

POWER BACKUP CABINET OVERALL DIMENSIONS
ILLUSTRATION 1-4

OnLine Power


REV A

1-9 THEORY OF OPERATION

- System schematic diagram shows the power path through PBC-II. See Illustration 1-5 for 120 Volt unit, Illustration 1-6 for 230V unit, Illustration 1-7 for optional 120V Adjunct Battery Cabinet, and Illustration 1-8 for optional 230V Adjunct Battery Cabinet. There is an option for extra 4 hours battery run time. The optional Adjunct Battery Cabinet provides an additional 4 hours of battery backup time. The main cabinet provides 4 hours of battery backup time, as a standard feature.
- Input Stage
Utility power enters the system through input circuit breaker from terminal block TB1-1, 1-2, and 1-3. The capacitors C2, C3, and C4 and EMI filter (A3) are for EMC requirements of FCC, 47CFR, Part 15, Subpart B.
Surge suppressor after the CB1 protect the unit for impulse class “B” requirement.
- Power Conditions Stage.
The input power is applied to the power PCBD assy through CN3L and CN3N and also is applied to the Battery charger PCBD (A6-A). The power PCBD assy (A1-A) with control PCBD assy (A1-B) monitors the input voltage at all the time for the input voltage range specifications such as 85 Volt - 130 Volt for 120 Volt unit and 180 V - 264 V for 230 Volt unit.
When the input voltage is within the range specification, the input power will support the critical load. The output voltage to the critical load will be same as the input voltage and will vary according to the input voltage variation. It is called “off-line technology” U.P.S.
When the input voltage range is out of the range specification, then microprocessor controlled logic (A1-B) initiates the immediate transferring to the battery and the inverter will support the critical load now from battery power without any output power interruption. The transfer time is within 4.3 milliseconds - 10 milliseconds with 100% load condition. If the load is less than 100% load, the transfer time is less. When any alarms such as overtemperature or overcurrent, over voltage or under voltage occur while the inverter supplies the power to critical load from the battery, the inverter will shut-off and try to by-pass to the input power source. (See Appendix E at the end.)

OnLine Power


REV A

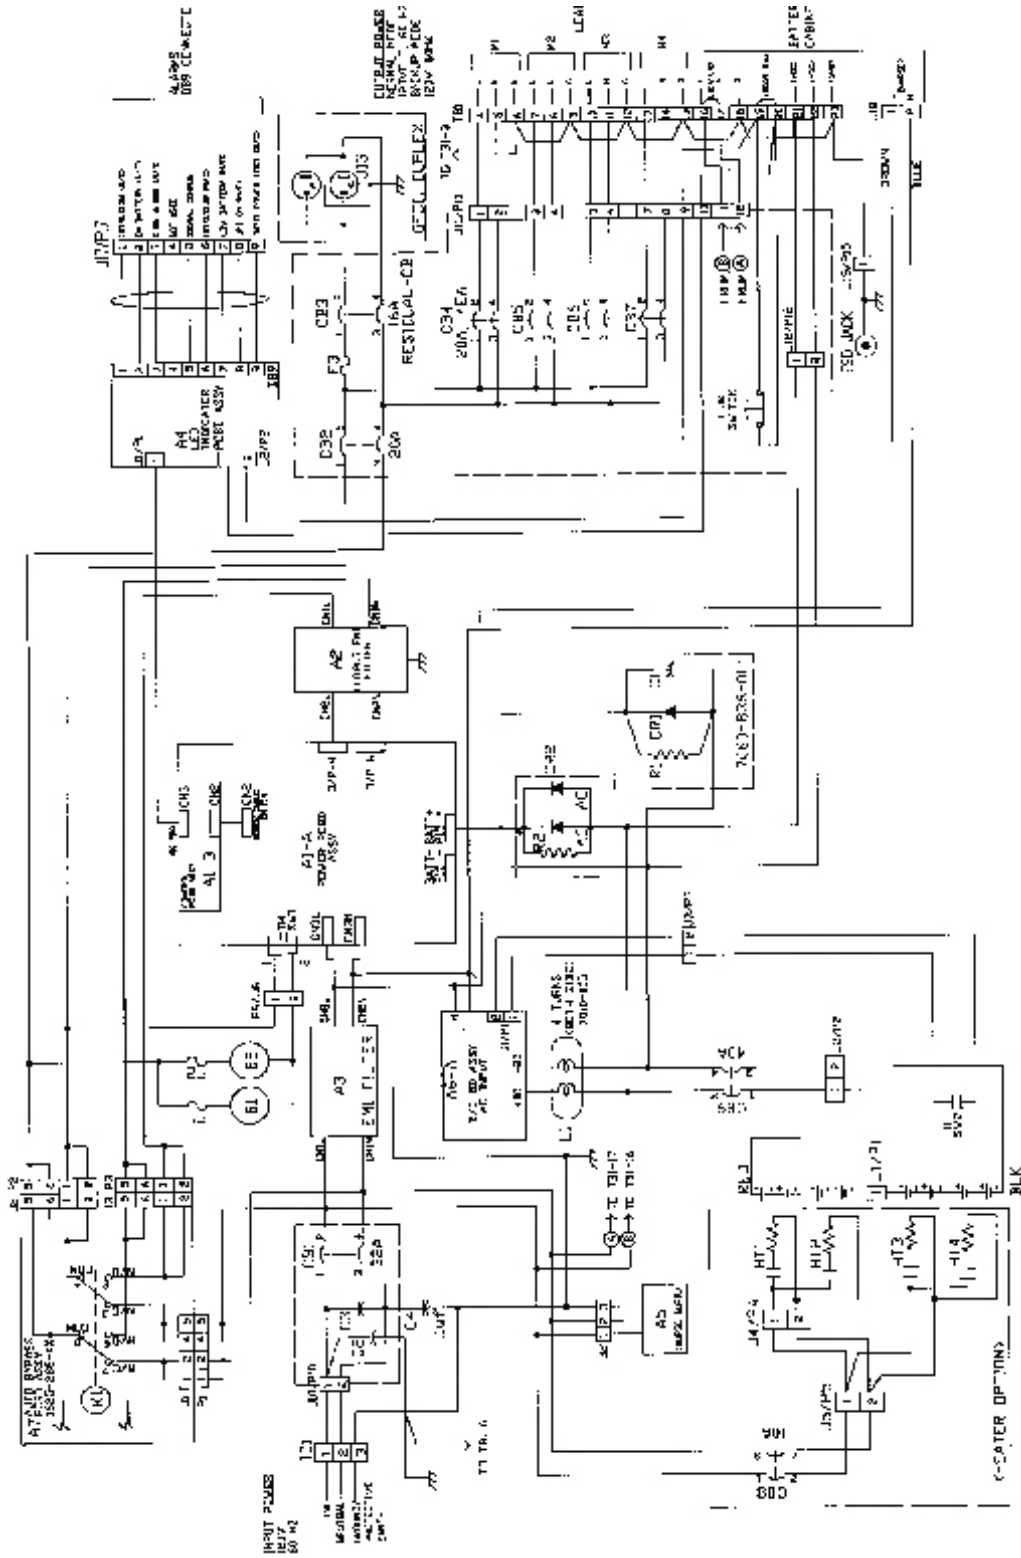

PBC-II SYSTEM SCHEMATIC DIAGRAM (120 VOLT UNIT)
ILLUSTRATION 1-5

OnLine Power


REV A

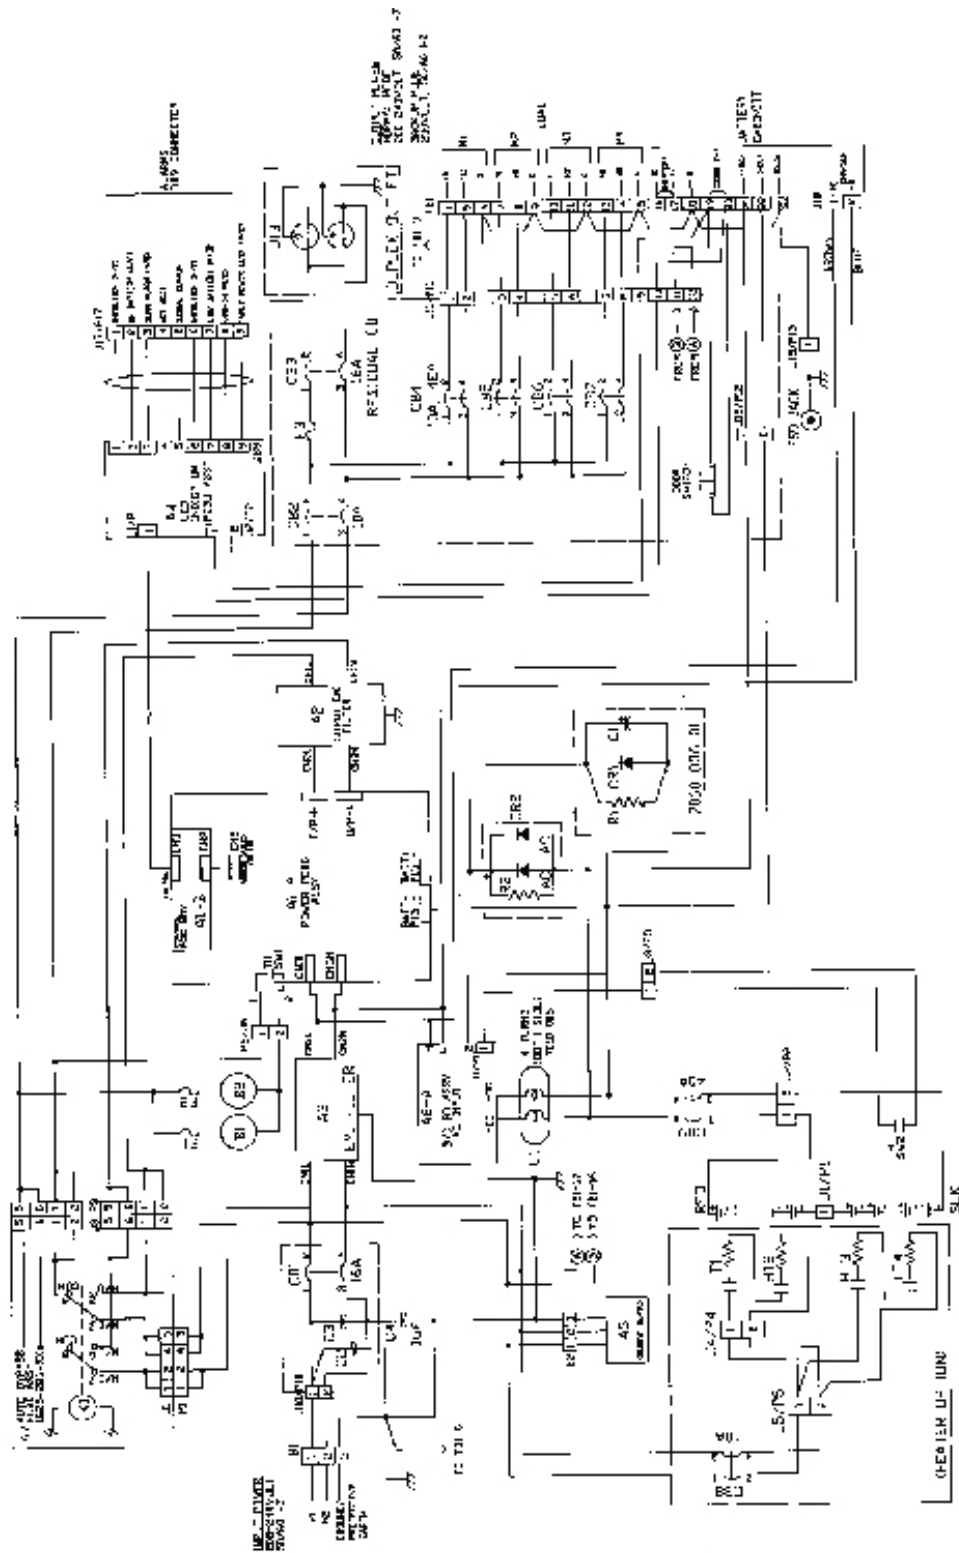

PBC-II SYSTEM SCHEMATIC DIAGRAM (230 VOLT UNIT)
ILLUSTRATION 1-6

OnLine Power


REV A

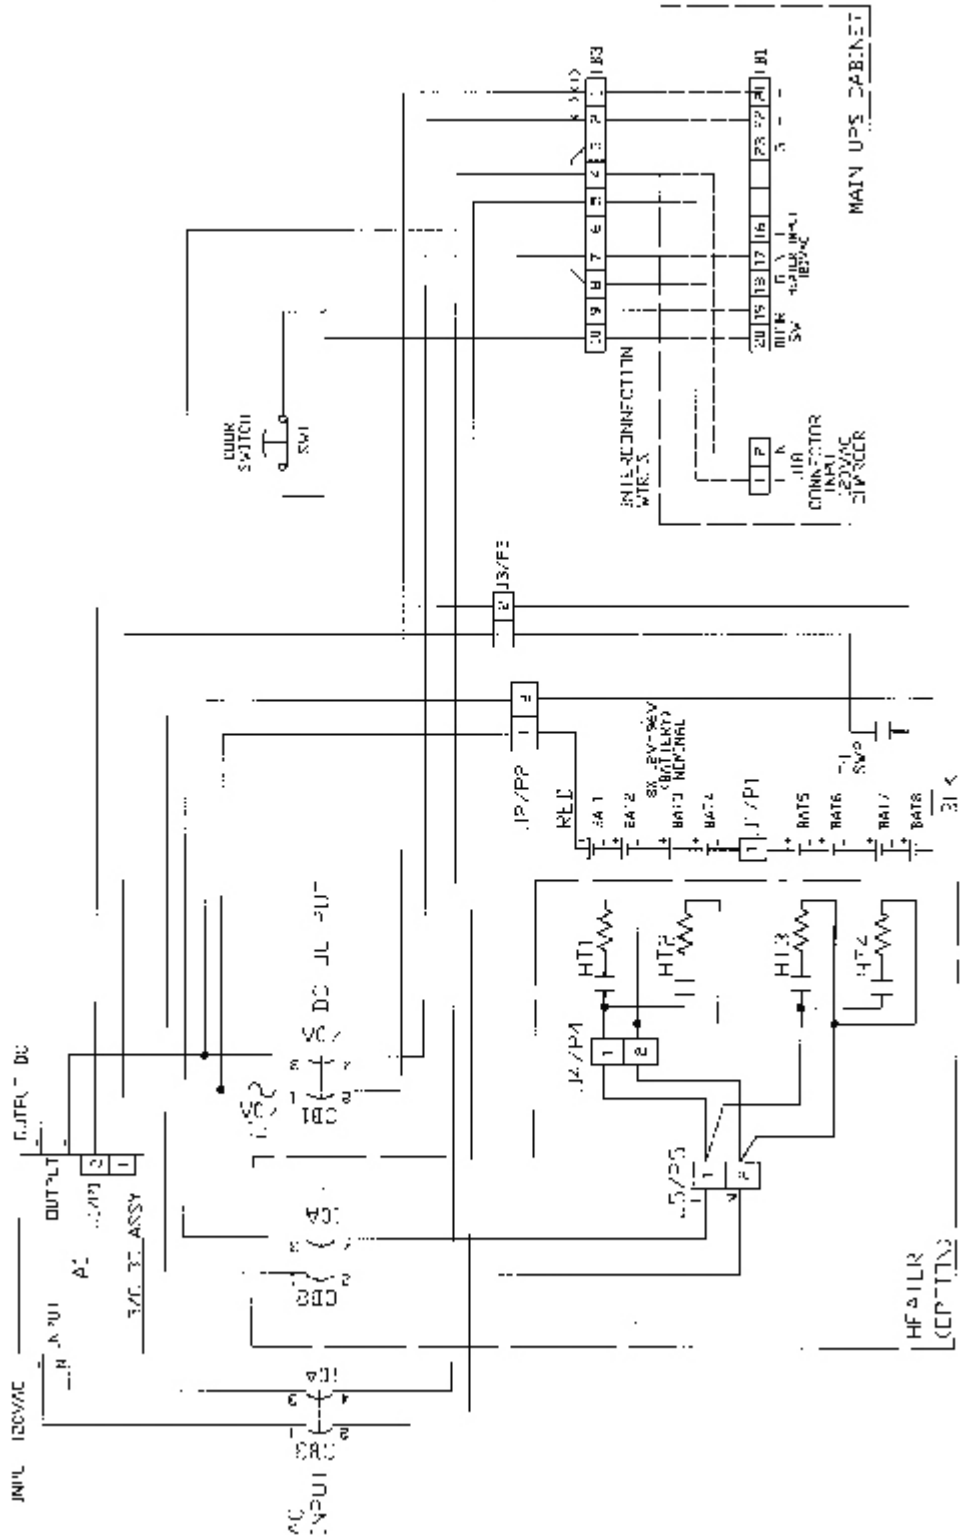

OPTIONAL ADJUNCT BATTERY CABINET SCHEMATIC DIAGRAM (120 VOLT UNIT)
ILLUSTRATION 1-7

OnLine Power

REV A

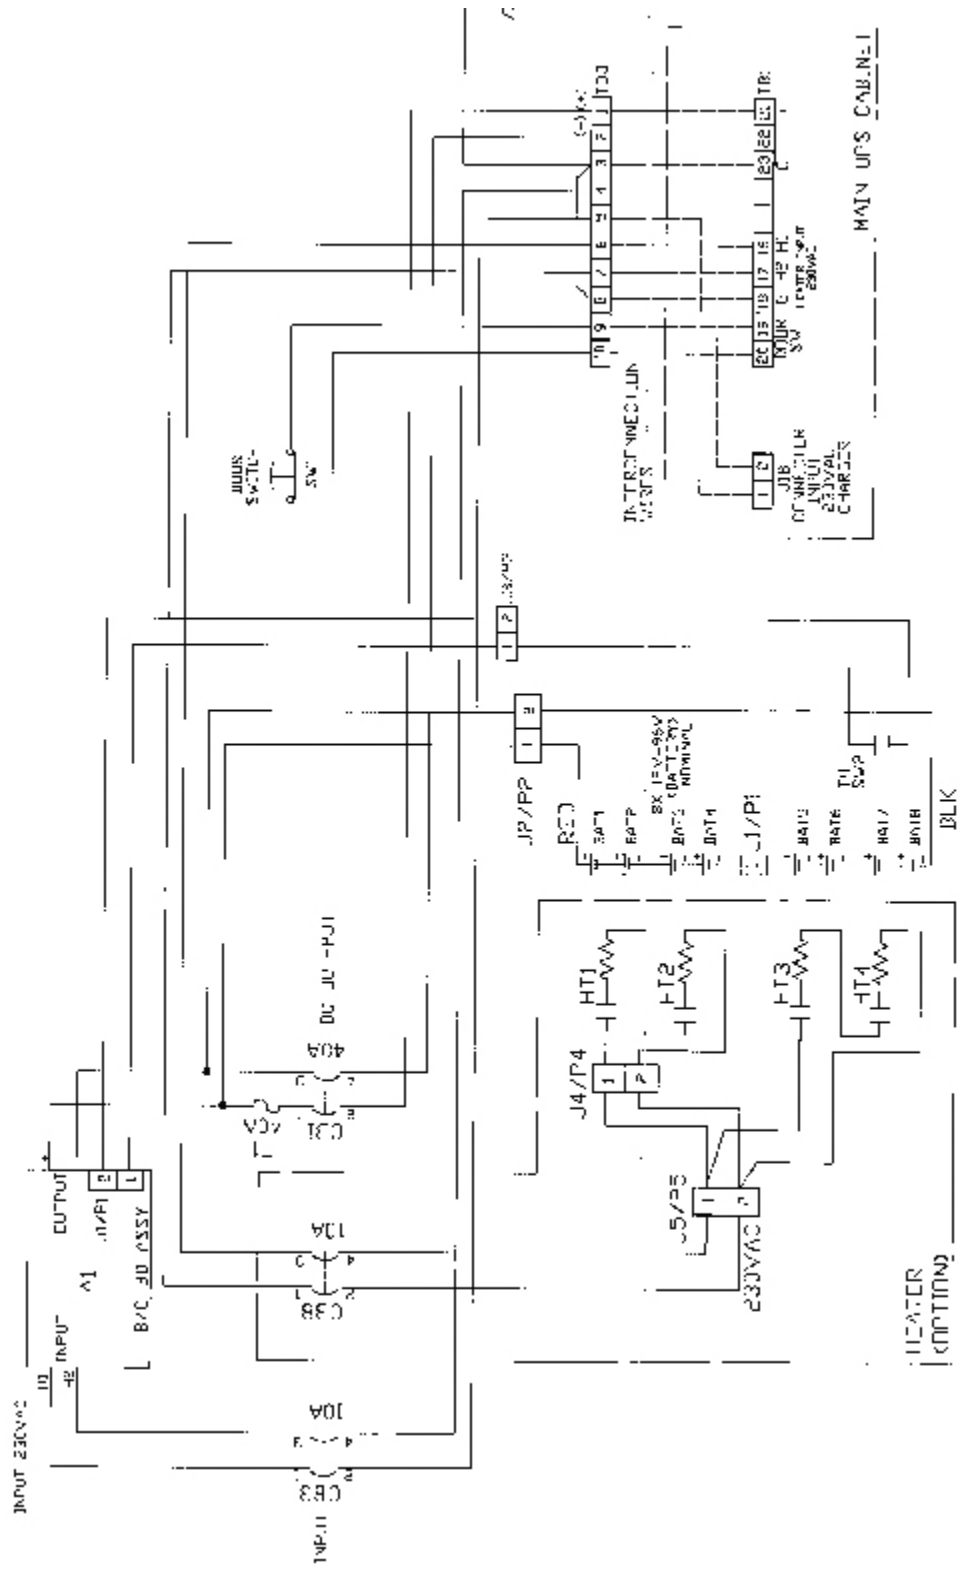

OPTIONAL ADJUNCT BATTERY CABINET SCHEMATIC DIAGRAM (230 VOLT UNIT)
ILLUSTRATION 1-8

SECTION 2 - PREINSTALLATION

2-1 SITE PLANNING AND PREPARATION

- Provide an operating environment that meets the following conditions:
- Ambient Temperature is 0°C to 40 O°C (32°F to 104 O°F)
- Relative Humidity is 10 to 95 % Non-Condensing.

2-2 Positioning

- Door shall have full 110 degrees open clearance, and have 5 feet clearance in front for bucket or platform.



- Inspection Safety Zone of Tray is 6 inches. Pass that point, the tray needs support, due to weight.
- The Electronic Tray weight is approximately 55 lbs.
- Each of the eight Battery weight is 82 lbs (for a total of 656 lbs. for 8 batteries).
- The PBC-II weight is approximately 892 to 899 lbs.

2-3 Site Planning Specifications

DC Mode:


| NOMINAL INPUT VOLTAGE | 208 VAC | 230 VAC | 120 VAC | 220 VAC | 240 VAC |
|-----------------------|-------------|-------------|-------------|-------------|-------------|
| Input Voltage Range | 180-264 | 180-264 | 85-130 | 180-264 | 180-264 |
| Max. Input Voltage | 264 VAC | 264 VAC | 130 VAC | 264 VAC | 264 VAC |
| Input Frequency | 60 | 60 | 60 | 50 | 60 |
| Output Frequency | 60 +/- 0.5% | 60 +/- 0.5% | 60 +/- 0.5% | 50 +/- 0.5% | 60 +/- 0.5% |
| *Output Voltage | 230V +/-3% | 230V +/-3% | 120V +/-3% | 230V +/-3% | 230V +/-3% |

*Output voltage vary and follow the input voltage in normal AC mode operation.

OnLine Power

REV A

2-4 Site Detail Electrical Specifications

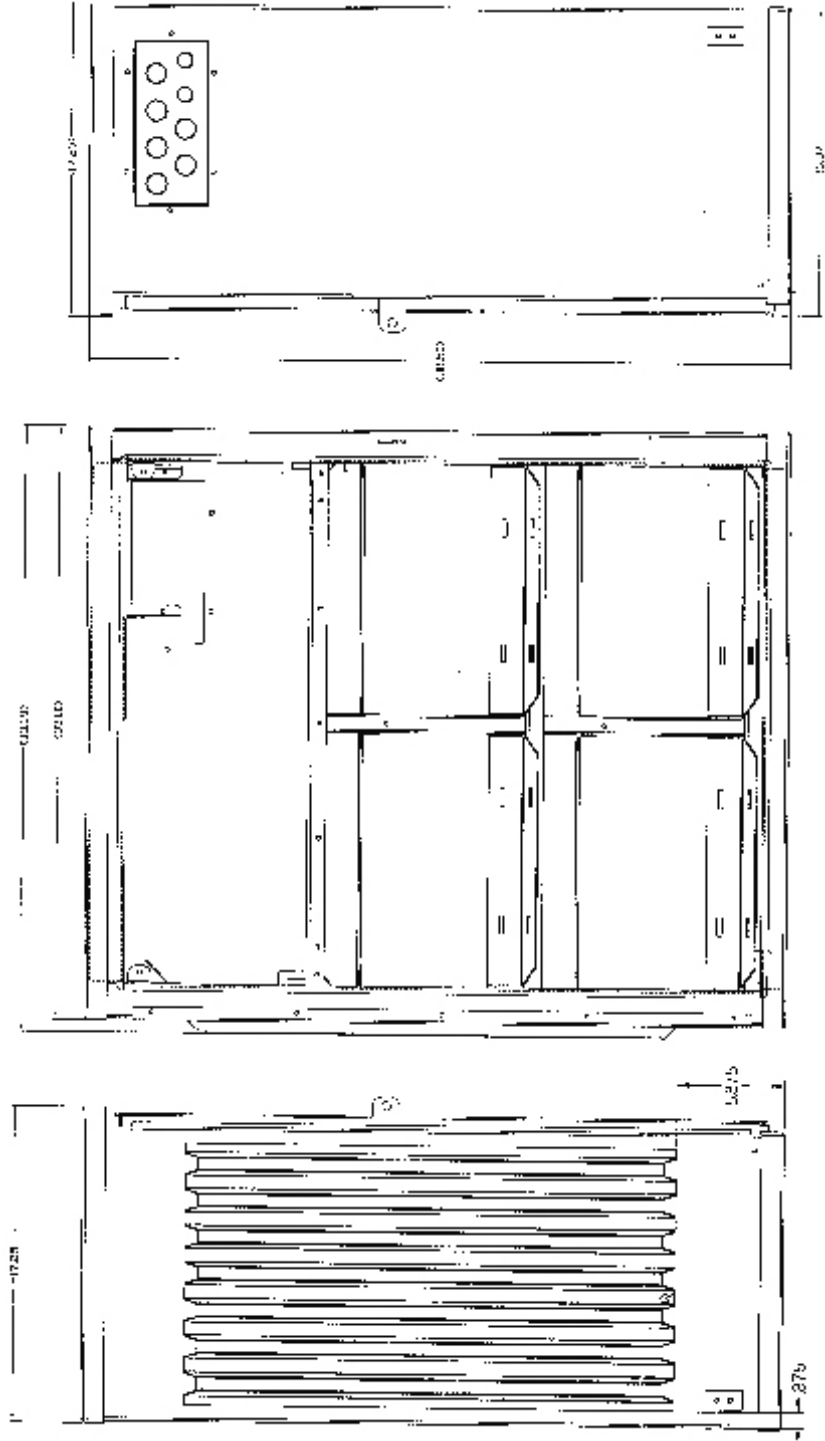

PBC-II FRAME FABRICATION DETAIL
ILLUSTRATION 2-1

SECTION 3 - INSTALLATION AND OPERATION

3-1 PBC-II UNPACKING

- The unit is delivered on a pallet, secured using metal bands. On removing the PBC-II from the pallet, be sure to keep the protective wrapping in place. Use the following procedure to unpack the unit.
- Position the pallet away from walls or other obstructions.
- Be sure pallet is sitting level where bands can not hit anything.



Exercise extreme caution as you cut the metal bands. They are under tension and may cause injury.

- Carefully remove the cardboard cover from unit; avoid puncturing the plastic bubble wrap with any sharp object that may damage the surface of unit.
- The bubbles wrap covers the PBC-II and should be removed at location when the unit is to be mounted.
- Save the packing material to allow it to be used to keep the unit covered and protected until start- up.
- Place units in location where it's used, then remove protective plastic film.
- Before final positioning of unit, verify that all cable routing and raceway are in the correct position.

3-2 INSPECTION

- Inspect the PBC-II for obvious damage or safety hazards that may have occurred during shipping or handling of unit.
- Inspect all units when received and before use.
- Inspect four (4) batteries located on each of the bottom and middle shelf to verify for no physical damages nor any leakage thru battery.
- Report any damage immediately to the originating factory, or to an authorized representative.
- Initiate Freight damage claims with the carrier as soon as possible.
- Compare the contents and model numbers with the packing list to ensure that all of the items were received.

OnLine Power

REV A

3-3 PBC-II STORAGE

- The batteries are installed in the PBC-II. For details of battery shelf time read appendix C.
- Provide a protected environment that meets the environmental limits listed below.
- Storage and Transport Temperature Range is - 40°C to +60°C
- Relative humidity: 0 % to 95 % non-condensing (inside cabinet).



**BATTERY SHELF LIFE!
WHEN STORED UNDER TEMPERATURE CONDITIONS OF 66 DEGREE F - 90
DEGREE F, IS FIVE (5) MONTHS MAXIMUM AFTER THE SHIP DATE.**

- For the BATTERY SHELF LIFE DETAILS read Appendix C.

3-4 PBC-II INSTALLATION

Installation of PBC-II has the following steps:

- The unpacking of PBC-II covered in section 3.1 & 3.2.
- The PBC-II installation and mounting.
- Connecting of conduit to PBC-II cabinet
- Connecting DB-9 to control panel.
- Wiring input power to unit at TB-1.
- Wiring output power from unit at TB-1.
- Powering up the PBC-II unit & testing it.
- Power up the output circuits & check loading.

OnLine Power

REV A

3-5 LIFTING REQUIREMENTS

- See Illustration 3-1 for location of two eyebolts and lifting details.
- Use Load - Rated Snaps on end of chain and a Spreader Bar.



- Because the PBC-II Cabinets and its contents, (batteries) are extremely heavy, the use of Power Equipment is necessary.
- Total weight for 1600W PBC Model is 899 lbs.
- Electronic Tray weight is approximately 55 lbs.
- The Battery weight, with a set of 8 batteries, is approximately 656 lbs.
- Power Backup Cabinet enclosure weight is approximately is 203 lbs.
- Pole mount adapter plates with hardware is approximately 10 lbs.
- Verify that the two eyebolts are secured and screwed at the top of the cabinet by turning it clockwise till tight. Two eyebolts with rubber washers are supplied in a bag inside the cabinet.
- Unit may be lifted using two eyebolts, located at the top roof of cabinet.

3-6 PBC-II POLE INSTALLATION




- a) A service disconnect switch having over-current protection is to be connected between the UPS and the utility transformer.
 - b) A bucket truck and other suitable equipment, including climbing spikes and safety harness are to be used during installation or servicing of the UPS on the utility pole.
 - c) The utility power conductors are to be connected to this UPS through an appropriate service entrance weather head.
 - d) Permission to mount the UPS on the utility pole shall be in accordance with agreements between the cable company and the utility company.
- With the successful completion of the unpacking of the PBC-II, proceed to next step, which is the mounting of the unit to the pole.

OnLine Power

REV A

- Ensure that all of the appropriate hardware is available for the mounting (See Appendix B for list of components supplied with the Accessory Kit and ensure that Pole Mounting Brackets and hardware are available.
- See illustration 3-1, which shows the unit installed with pole mount fixture. See Table 3.1 for the part numbers of the required parts.
- For the mounting of the weldment on the pole, see Illustration 3-1 for assembly details.
- Check to see the center to center spacing of the weldments is correct, and the bolt hole alignment matches.
- Using the lifting eyes on the top of the unit, rig the unit for lifting with the PBC-II in balance and level from side to side is correct.
- Install the bottom bolts first and tighten. Leave the bolt a little loose to permit some play.
- Install the top bolts and tighten, leave the bolt a little loose to permit some play.

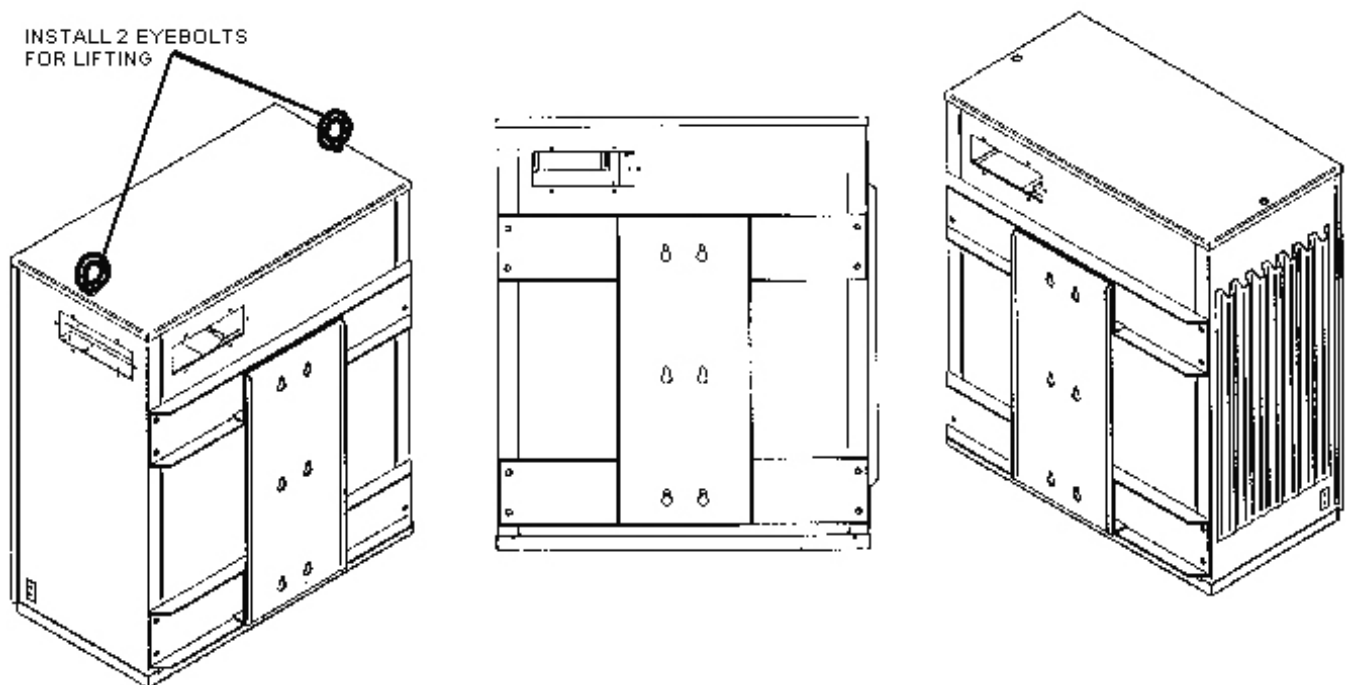

PBC-II POLE MOUNTING
ILLUSTRATION 3-1

Note: For pole mounting details, see Lucent Installation Manual.

OnLine Power

REV A

3-7 POWER BACKUP CABINET TO POLE GROUNDING

- Install the ground jumper and ground cables at external ground pad as shown in Illustration 3-2 and Table 3-1 Ground Kit.

TABLE 3-1
Part of List 35 or 36 (see Appendix B)

| POLE MOUNTING CABINET GROUND KIT | | | |
|----------------------------------|--|-----|---------------------|
| ITEM | DESCRIPTION | QTY | OLP P/N |
| 1 | Compression Connector, 6 AWG, 2 Hole Lug | 2 | 1200-182 |
| 2 | M6 x 16 mm, Screw, Hex Head, S.S. | 4 | 1800-300 |
| 3 | M6, Washer, Split, S.S. | 4 | 1825-085 |
| 4 | M6, Washer, Flat, S.S. | 4 | 1825-084 |
| 5 | 6 AWG, Wire Stranding, Green, Grounding by 26 inches | 2 | 4000-090 |
| 6 | 2 AWG, Wire Strand, Green, Grounding Bus, reference only Contractor Supplied | x | Contractor Supplied |
| 7 | C-Tap, 12-1/0 AWG Burndy | 2 | 1200-171 |

- Inspect the ground jumper and ground cable connections for good crimp.
- Inspect the ground connection in both rear corners of the cabinet to the lower left, rear corner of the door at the hinge side.
- Inspect the M 6 hex head screws for torque of 7.7 (N 2 m) compression lugs on lower rear corners.
- Tighten all bolts to a torque of 7.7 (N 2 m). Apply one drop of Torque-Seal to each bolt.

3-8 POWER BACKUP CABINET GROUNDING TEST


- Grounding Test requires a Digital Multi-meter similar to a Fluke model 87 True rms. MULTIMETER,
- With a MULTI-METER check the resistance between the ground pole cable to the grounding of the cabinet door, the reading shall be less than 0.01 ohms.
- With a MULTI-METER check the resistance between the ground pole cable to the TB1-3, the reading shall be less than 0.01 ohms.



Make sure ALL POWER to PBC-II is Tagged Out & LOCK "OFF" Before working on the Power Backup Cabinet Electrical System.

OnLine Power

REV A

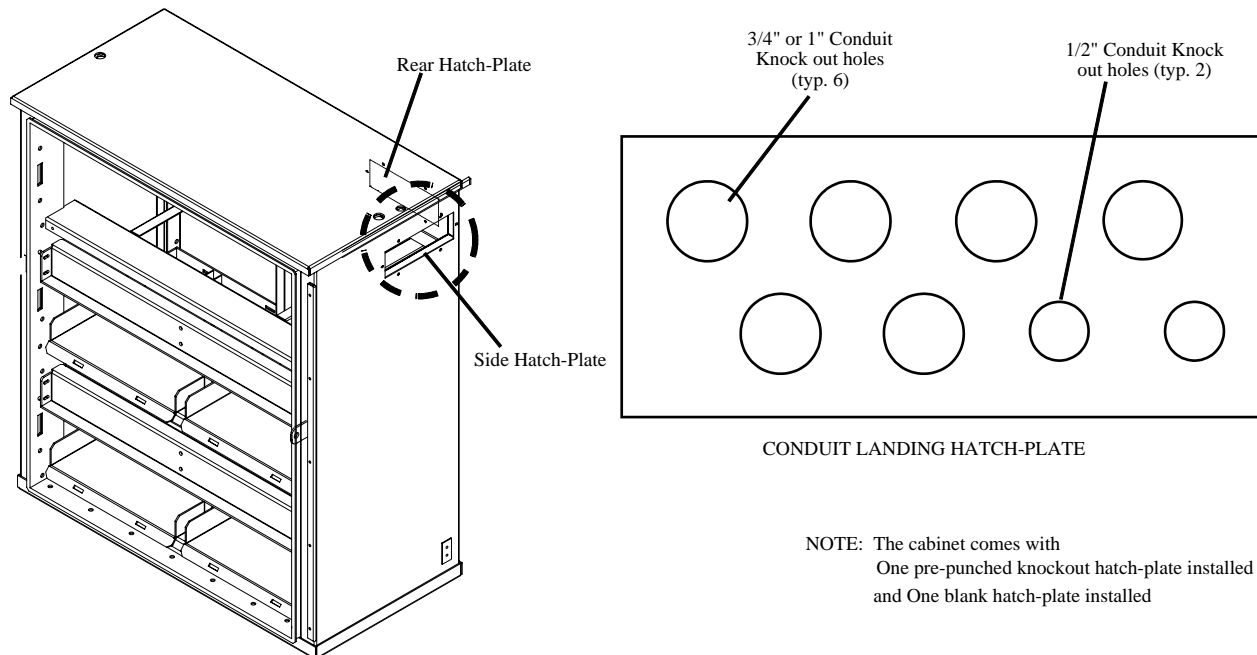

CABINET CONDUIT LOCATION
ILLUSTRATION 3-2

3-9 PBC-II CONDUIT INSTALLATION

See Lucent Technical Installation Manual for details

3-10 ELECTRONIC TRAY WIRING


See Lucent Technical Installation Manual for details

3-11 INPUT & OUTPUT WIRING (TB1)

- Connect three (3) input power wires (No 12AWG or higher) at TB1-1, 2, and 3.
- Connect outputs #1 through #4 at TB1-4 through TB1-15 (as required)
- Connect TB1-16 through TB1-23 and Connector J13 to the optional Adjunct Battery Cabinet using supplied interconnect kit as follows. Connector J13 and wiring at TB1-16 through TB1-23 is not used, when the optional Adjunct Battery Cabinet is not used.

OnLine Power

REV A

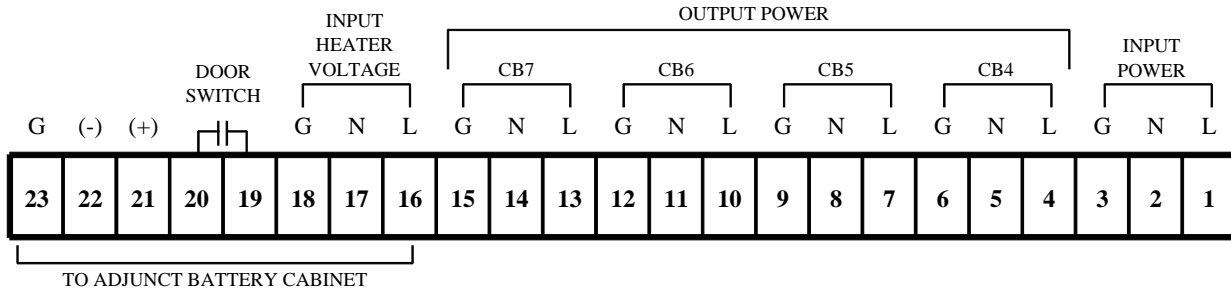


CONNECTIONS AT TB1 OF MAIN UPS CABINET
ILLUSTRATION 3-3

| | |
|--------|---|
| TB1-1 | INPUT VOLTAGE - HOT LINE |
| TB1-2 | INPUT VOLTAGE - NEUTRAL FOR 120V, LOW LINE FOR OTHER VOLTAGES |
| TB1-3 | INPUT GND |
| TB1-4 | OUTPUT #1 - HOT LINE |
| TB1-5 | OUTPUT #1 - NEUTRAL FOR 120V, LOW LINE FOR OTHER VOLTAGES |
| TB1-6 | OUTPUT #1 - GND |
| TB1-7 | OUTPUT #2- HOT LINE |
| TB1-8 | OUTPUT #2 - NEUTRAL FOR 120V, LOW LINE FOR OTHER VOLTAGES |
| TB1-9 | OUTPUT #2 - GND |
| TB1-10 | OUTPUT #3- HOT LINE |
| TB1-11 | OUTPUT #3 - NEUTRAL FOR 120V, LOW LINE FOR OTHER VOLTAGES |
| TB1-12 | OUTPUT #3 - GND |
| TB1-13 | OUTPUT #4- HOT LINE |
| TB1-14 | OUTPUT #4 - NEUTRAL FOR 120V, LOW LINE FOR OTHER VOLTAGES |
| TB1-15 | OUTPUT #4 - GND |
| TB1-16 | HEATER VOLTAGE - HOT LINE FOR OPTIONAL ADJUNCT BATTERY CABINET |
| TB1-17 | HEATER VOLTAGE - NEUTRAL FOR 120V, LOW LINE FOR OTHER VOLTAGES. ROUTE WITH TB1-16 |
| TB1-18 | GND. ROUTE WITH TB1-16 |
| TB1-19 | DOOR SWITCH (N/O) FROM OPTIONAL ADJUNCT BATTERY CABINET |
| TB1-20 | DOOR SWITCH (N/O) RTN FROM OPTIONAL ADJUNCT BATTERY CABINET |
| TB1-21 | +96VDC FROM OPTIONAL ADJUNCT BATTERY CABINET |
| TB1-22 | -96VDC FROM OPTIONAL ADJUNCT BATTERY CABINET |
| TB1-23 | GND FROM OPTIONAL ADJUNCT BATTERY CABINET |

OnLine Power


REV A

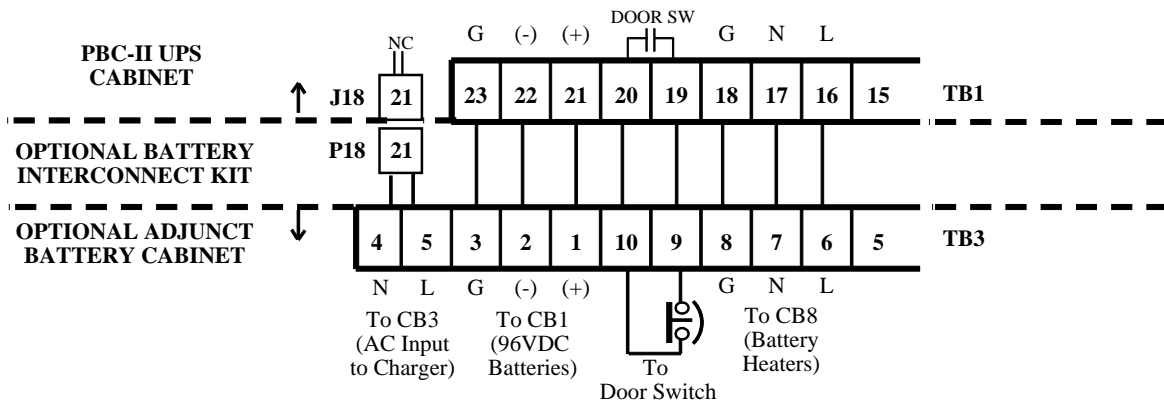


CONNECTIONS TO ADJUNCT BATTERY CABINET
ILLUSTRATION 3-4

3-12 WIRING FOR OPTIONAL BATTERY HEATERS

120 Volt Unit

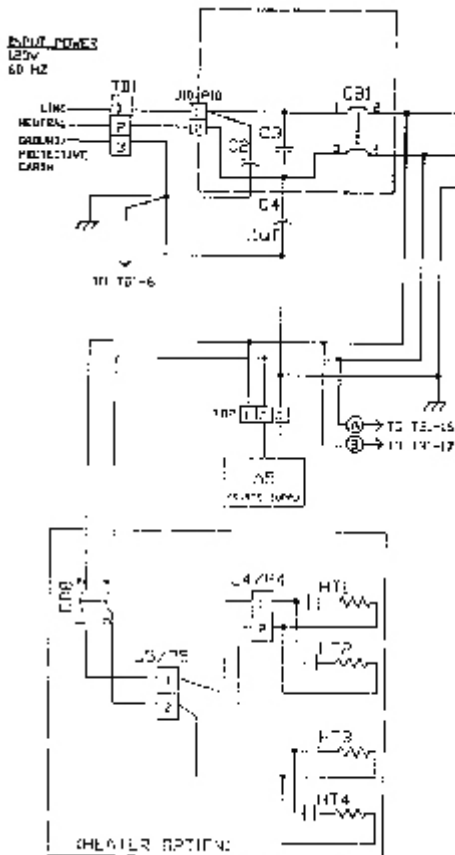

230 Volt Unit

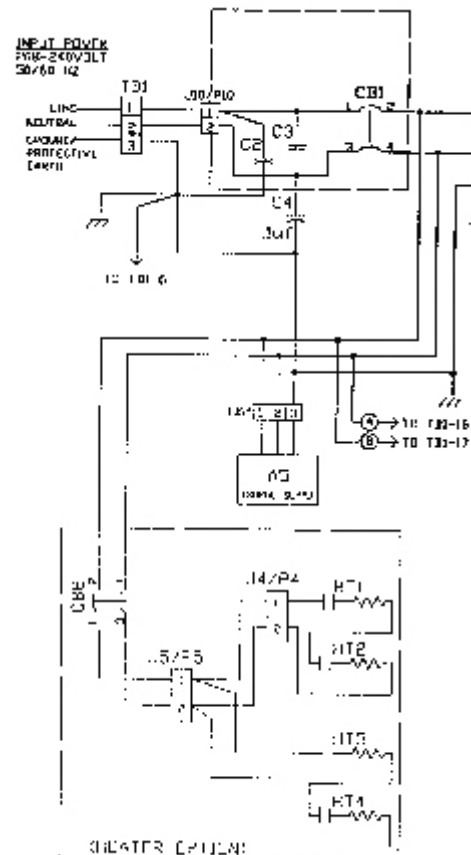

WIRING FOR OPTIONAL BATTERY HEATERS
ILLUSTRATION 3-5

OnLine Power

REV A

3-13 ELECTRONIC TRAY, WIRING CHECK OUT

- Verify the Input and Output Connections are per wiring detail in section 3-11 for the Model being installed.
- Verify the Input and Output TB 1 have been torqued to value below:
- Screw torque shall be 35 lbs./ in, (4.0 N-m) for TB 1.
- Screw torque shall be 45 lbs./ in, (5.1 N-m) for Ground lug.

3-14 PBC-II BATTERY CONNECTION

- Check that BLACK & RED plug (J2/P2) from the Battery is in the Battery Jack on the electronic Tray.
- Engage the Heater's plugs (J5/P5) on the Model's with battery Heaters.
- Make sure thermo probe connectors (J3/P3) are connected.

3-15 PBC-II POWER UP PROCEDURE

- Check CB 1, CB 2, and CB 9 are in the "OFF" position.
- Now is the time to remove Safety Tag-outs, and turn "ON" the installation Power Distribution Circuit Breakers to "ON".
- Check for AC Input Voltage at TB1-1, -2 to be correct for the model installed.
- Turn CB1 to the "ON" position,
- Measure the AC input voltage into the PBC-II to be proper for this Model. The Green "AC ON" LED shall be "ON".
- Green MB and HB LED will be "ON".
- The Green "BYPASS" LED will turn "ON", after about 20 seconds.
- Turn CB 9 to "ON".
- With a Digital Voltmeter check the battery Voltage across the RED & Black plug terminals. The DC Voltage shall be 81 to 110 VDC. If battery voltage is less than 81 VDC, replace the batteries.
- Turn CB 2 and CB 3 through CB 7 "ON", as applicable.
- Apply the load in steps. The Green "LOAD LEVEL" LED's will light in succession as additional load increases.
- Unit is ready and in operation.

OnLine Power


REV A

3-16 PBC-II BATTERY BACK-UP OPERATION TEST

- Verify the battery voltage to be 90 VDC or higher at TB1-21, -22 before performing a quick backup test.
- Run the unit in AC mode by closing CB1, CB9 per above Section 3-14.
- Turn “CB1” to the “OFF” position.
- Note that the green LEDs for “ON UPS”, and “On 'Battery” are lit. A beeper will sound to indicate the unit is running from battery.
- Turn CB 2 to “ON” position.
- With a Digital Voltmeter check the output Voltage to be as required.
- Apply the load in steps. The Green “LOAD LEVEL” LED's will light in succession as additional load increases.
- Turn CB1 to “ON” position.
- Unit is ready and in operation.

3-17 PBC-II PAD LAYOUT

- Use M12 or 1/2 inch Anchor Bolts for mounting PAD Plate to Concrete Pad or Roof.
- PAD Plate may be crossways to door as shown .

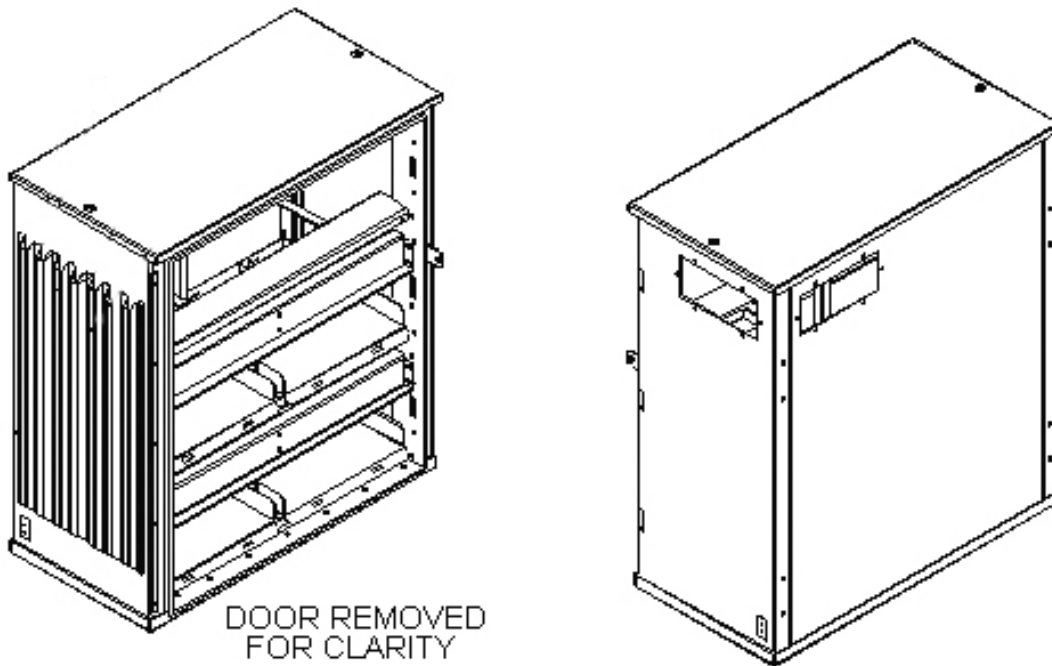


PBC-II LAYOUT
ILLUSTRATION 3-6

SECTION 4 - SERVICING THE POWER BACKUP CABINET

4-1 THE MODULARITY OF INTERNAL COMPONENTS

- The two basic physical assemblies are the Electronic Tray and Batteries.
- Each item can be removed for servicing or repair. The spare assembly can be installed in minutes.

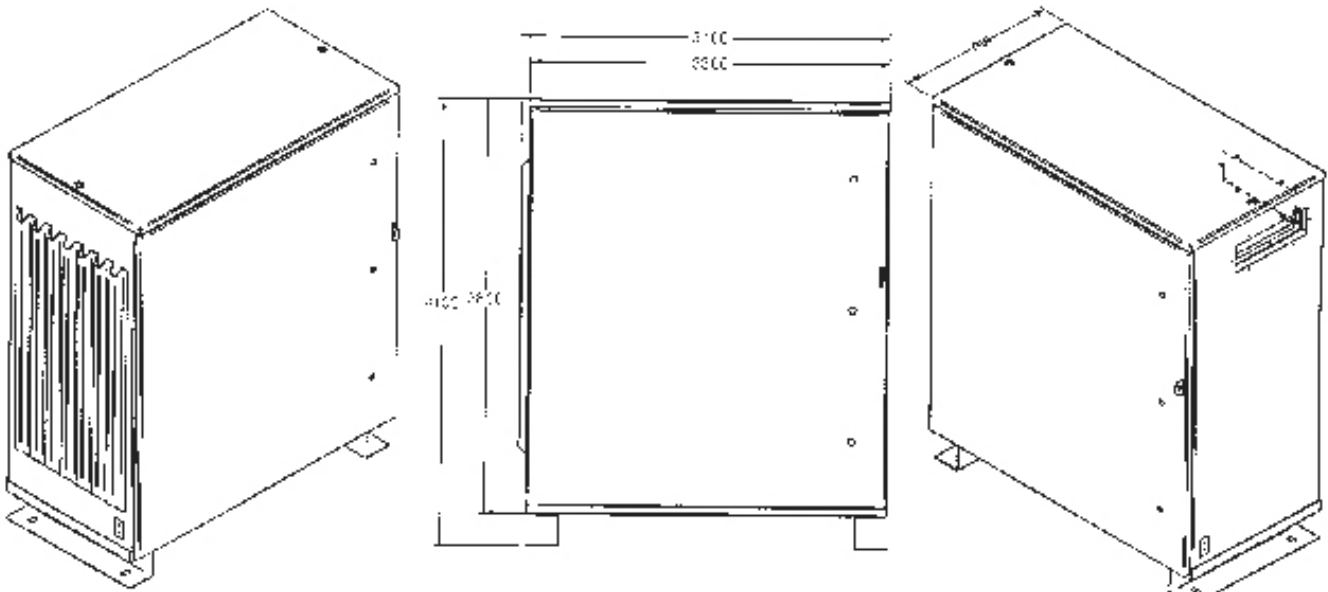

FRONT VIEW OF POWER BACKUP CABINET
ILLUSTRATION 4-1

4-2 SERVICING (STARTS WITH SAFETY)



- Turn CB 2 thru CB9 (all breakers) to "OFF" position, next Turn your AC Input power to PBC-II unit to "OFF" position. LOCK and Tag "Out of service". With digital meter, check all terminals of TB 1 and TB 2 for zero voltages. Recheck all terminals of TB 1 and TB 2 and the cabinet to ground, to be at zero voltage.

OnLine Power

REV A

4-3 REMOVAL OF ELECTRONIC TRAY FOR SERVICING

- Check each wire has an identification tag before removing.
- Remove the DB-9 plug with external cable by unscrewing 2 screws. Remove all connectors (J10, J11, J12, J15, J18) at TB1, so the tray can be disconnected from TB1. Disconnect Battery connector (Red & Black, J2/P2), heater J5/P5 connector and thermo probe connector J3/P3 that are connected to bottom two trays. Check that the wire/plug tags are correct and readable.
- Remove the four (4) Hold Down Screws at the bottom lip of the Electronic Tray.



Carefully slide the Tray out of the cabinet, the Electronic tray weight approximately 55 lbs.

4-4 REPLACING OF ELECTRONIC TRAY

- Carefully slide the Tray into the cabinet. Use care to guide it in straight.
- Connect all the connector (J10, J11, J12, J15, J18) at TB1 & the three connectors (J2, J3, J5) going to bottom two trays per Section 4-3.
- Install the four (4) Hold down Screws at the bottom lip of the Electronic Tray and Torque to 76 in/lbs.
- Check the identification tag of each connectors before reconnecting.
- Test the PBC-II operation in the normal mode by following section 3 - 13 through 3 - 16.

4-5 BATTERY REMOVAL AND SERVICING



FOR HOT SWAPPING USE EXTREME CARE AS MAIN AC LINE IS NOT TURNED "OFF" OR LOCK AND TAG OUT OF SERVICE. USE A DIGITAL METER CHECK ALL TERMINALS OF TB1 FOR ANY VOLTAGE.

- Turn CB 9 to "OFF". Unplug the Red and Black connector (J2/P2) from the Battery Jack. Unplug the White connector J5/P5 for battery heaters and a white connector J3/P3 for the thermo probe.

OnLine Power

REV A

- Remove the Hold Down bracket at each side of the Battery.
- ALL BATTERY WORK SHOULD BE PERFORMED ON THE GROUND AS BATTERY CAN WEIGH OVER 80 LBS. HANDLE CAREFULLY.
- Carefully slide the Battery out of the cabinet. Carefully disconnect the battery terminals, insulate wiring lugs using electrical tape.

4-6 REPLACING BATTERY

- Replace the new battery (same type as the one removed) and connect its terminals.



REINSTALL THE THERMOPROBE AT THE SAME BATTERY TERMINAL IF IT WAS REMOVED EARLIER.

- Slide the battery in its location. Connect the battery cables and torque the terminals.
- Reinstall the front hold down bracket.
- Reconnect J2, J3, and J5 in front, for Battery Power, Thermo probe and Battery Heaters respectively.

OnLine Power


REV A

Appendix A: SUMMARY OF INDICATORS AND CONTROLS

Status Indicators

The unit has two major components, the Electronic Tray and Battery. The Electronic Tray contains the battery charger, breakers, receptacles, LED status panel, Inverter circuitry, and the input/output terminals. Each of the two lower tray holds four batteries on each shelf. The lights on the LED status panel (at the front panel display) indicates the unit's operational mode. These lamps provide a positive visual indication of specific aspects of the unit's functional operation. These are as follows:

| | |
|-------------------------------------|--|
| OVERLOAD (Red LED) | The output load is over 100% of rated load. |
| 100% (Green LED) | Full load of 100% rating. |
| (Green LED) | 75% of rated load. |
| (Green LED) | 50% of rated load. |
| 25% (Green LED) | 0 to 25% of rated load. |
| SUMMARY ALARM (Red LED) | Illuminates when unit shutdown alarm condition is present such as over temp., output short circuit, output overload, & DC over-voltage |
| HIGH BATTERY CAPACITY (Green LED) | Indicates the batteries are fully charged |
| MEDIUM BATTERY CAPACITY (Green LED) | Indicates the batteries are half charged |
| LOW BATTERY (Red LED) | Indicates the battery is approaching low shutdown level. |
| ON BATTERY (Green LED) | Indicates the battery is ON, and output is supplied from battery. |
| BYPASS ON (Green LED) | Indicates the unit is running with AC input power in OFF Line, AC Mode, in Bypass. |
| INVERTER ON (Green LED) | Indicates the unit is running with the battery power in Inverter mode. |
| INPUT AC ON (Green LED) | Indicates the input power is present. |
| UPS OFF S1 | Used only to shut-off UPS when unit is running in DC mode. |
| UPS ON S2 | Used only to turn on UPS when unit is running in DC mode. |

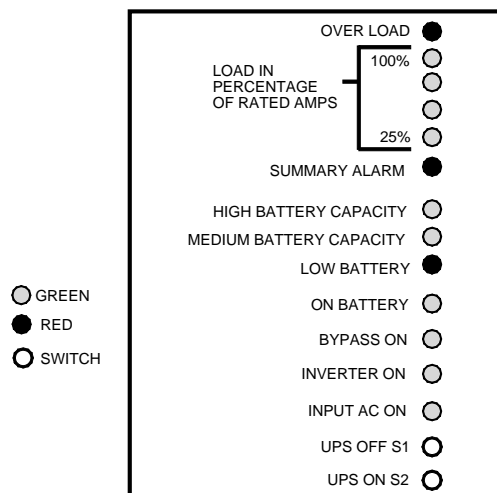

ELECTRONIC TRAY - STATUS PANEL


OnLine Power

REV A

In the normal running condition, "Input AC ON" (Green LED) and "Bypass ON" (Green LED) is lit ON indicating that input AC power is available and unit is running in AC mode (Off-Line), in Bypass mode. When input power is lost or disappears, "Input AC ON" green LED shuts OFF, "Bypass ON" green LED shuts OFF. "ON Battery" and "Inverter ON" green LEDs lit ON indicating that output power is supplied from battery & inverter (unit is running on battery and inverter).

Alarm Signals

Also providing information on the unit's status/particular aspects to the outside world by way of electrical signals is a DB-9 connector. This DB-9 connector is located on the front console of the Electronic Tray. This interface provides a set of open and closed contacts, which relate the status of PBC-II to the outside world. An interface DB-9 connector and cable permit the unit to bring out following signals with their normal state (open or closed). The contacts (Normally Open or Normally Closed) is shown when unit is running in normal condition (i.e. with input power present and everything normal within limit).

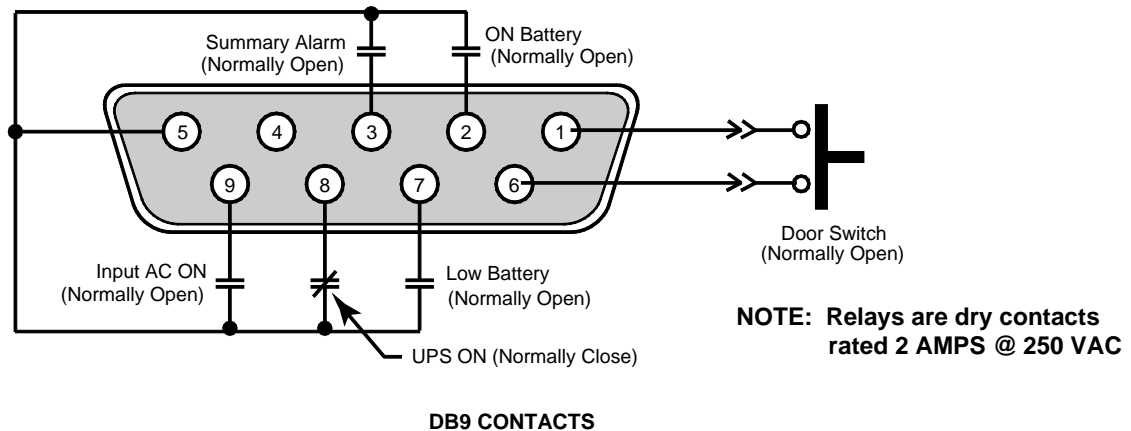

DB9 CONTACTS

| DB9 Pin Numbers | UPS Power-Off, all CB's open condition | Normal Operating Condition (Input AC On, UPS On) | Failure/Alarm Condition | Alarm Description |
|-----------------|--|--|---|---------------------------------------|
| 3 to 5 | OPEN | OPEN | CLOSE, Latched (for short circuit and overload) | Summary Alarm |
| 7 to 5 | OPEN | OPEN | CLOSE | Low Battery |
| 2 to 5 | OPEN | OPEN | CLOSE (UPS battery on) | On Battery |
| 8 to 5 | OPEN | CLOSE | OPEN (UPS OFF) | UPS On ("bypass on" or "inverter on") |
| 9 to 5 | CLOSE | OPEN | CLOSE (input power-off) | Input AC ON |
| 1 to 6 | OPEN for door close | OPEN | CLOSE (door open) | Intrusion Door Switch |

Appendix B: INSTALLATION ACCESSORY KITS

B-1 INSTALLATION

The Installation Kit/60 Hz consists of conduits, fitting, and electrical power wires for connections to other cabinets that are separated up to 15 ft. The kit contains the following components:

| Kit Description | QTY | PART NO. |
|--|-------|-----------------|
| 1/2" FLEXIBLE LIQUID TIGHT CONDUIT | 15 FT | |
| 1/2" LIQUID FLEXIBLE METAL SEAL RING | 2 | T&B 5262 |
| 1/2" LIQUID FLEXIBLE METAL CONDUIT FITTINGS, 90 | 1 | T&B 5352 |
| 1/2" LIQUID FLEXIBLE METAL CONDUIT FITTINGS, STR | 1 | T&B 5332 |
| 1" FLEXIBLE LIQUID TIGHT CONDUIT | 20 FT | |
| 1" LIQUID TIGHT FLEXIBLE METAL CONDUIT SEAL RING | 8 | T&B 5264 |
| 1" LIQUID TIGHT FLEXIBLE METAL CONDUIT FITTINGS, 90 | 4 | T&B 5354 |
| 1" LIQUID TIGHT FLEXIBLE METAL CONDUIT FITTINGS, STR | 4 | T&B 5334 |
| AC POWER CABLES 10 AWG | 40 FT | THHN-BLK-10-STR |
| AC POWER CABLES 10 AWG | 20 FT | THHN-WHT-10-STR |
| AC POWER CABLES 10 AWG | 20 FT | THHN-GRN-10-STR |
| 6 AWG GREEN GROUND INSULATED CONDUCTOR | 6 FT | |
| M6 x 1.0 x 20 MM LONG STAINLESS STEEL HEX BOLT | 4 | |
| M6 STAINLESS STEEL LOCKWASHER | 4 | |
| M6 STAINLESS STEEL FLATWASHER | 4 | |
| 6 AWG TO 2AWG C-TAP CU | 2 | |
| 2 HOLE COMPRESSION LUG 6 AWG CU .75 CENTER TO CENTER | 2 | |
| 1" METAL CLAMP | 6 | |
| 1/2" METAL CLAMP | 6 | |
| CONNECTOR | 1 | HEYCO P/N 3214 |
| ALARM CABLE, SOLID #24 AWG, DB 9, 20 FT. | 1 | |

Note

1. Interconnection hardware between the UPS and service entrance is not included in this kit.
2. All conductors are stranded, copper, unless noted.

OnLine Power

REV A

B-2 INSTALLATION KIT/50 (P/N 9100-1241)

The Installation Kit/50 Hz consists of conduits, fitting, electrical power wires for connections to other cabinets that are separated up to 14 ft. The Kit contains the following components:

| Kit Description | QTY | PART NO. |
|--|-------|---------------------------|
| 1/2" FLEXIBLE LIQUID TIGHT CONDUIT | 15 FT | |
| 1/2" LIQUID FLEXIBLE METAL SEAL RING | 2 | T&B 5262 |
| 1/2" LIQUID FLEXIBLE METAL CONDUIT FITTINGS, 90 | 1 | T&B 5352 |
| 1/2" LIQUID FLEXIBLE METAL CONDUIT FITTINGS, STR | 1 | T&B 5332 |
| 1" FLEXIBLE LIQUID TIGHT CONDUIT | 20 FT | |
| 1" LIQUID TIGHT FLEXIBLE METAL CONDUIT SEAL RING | 8 | T&B 5264 |
| 1" LIQUID TIGHT FLEXIBLE METAL CONDUIT FITTINGS, 90 | 4 | T&B 5354 |
| 1" LIQUID TIGHT FLEXIBLE METAL CONDUIT FITTINGS, STR | 4 | T&B 5334 |
| AC POWER CABLES 6 MM ₂ | 20 FT | THHN-BROWN-6-STR |
| AC POWER CABLES 6 MM ₂ | 20 FT | THHN-BLUE-6-STR |
| AC POWER CABLES 6 MM ₂ | 20 FT | THHN-GRN/ YELLOW-6-STR |
| 10 MM ₂ GREEN/YELLOW GROUND INSULATED CONDUCTOR | 6 FT | |
| M6 x 1.0 x 20 MM LONG STAINLESS STEEL HEX BOLT | 4 | |
| M6 STAINLESS STEEL LOCKWASHER | 4 | |
| M6 STAINLESS STEEL FLATWASHER | 4 | |
| 10 MM ₂ TO 35 MM ₂ C-TAP CU | 2 | |
| 2 HOLE COMPRESSION LUG 6 AWG CU .75 CENTER TO CENTER | 2 | |
| 1" METAL CLAMP | 6 | |
| 1/2" METAL CLAMP | 6 | |
| CONNECTOR | 1 | HEYCO P/N 3214 |
| ALARM CABLE, SOLID #24 AWG, DB 9, 20 FT. | 1 | |

Note

1. Interconnection hardware between the UPS and service entrance is not included in this kit.
2. All conductors are stranded, copper, unless noted.

OnLine Power

REV A

B-3 INTERCONNECTION KIT/8 Hrs (P/N 9100-1242)

The Interconnection Kit/8 Hrs consists of conduits, fitting, electrical power wires for connections to other cabinets that are separated up to 4 ft. The Kit contains the following components:

| Kit Description | QTY | PART NO. |
|---|-------|-----------------|
| 3/4" FLEXIBLE LIQUID TIGHT CONDUIT | 25 FT | |
| 3/4" FLEXIBLE LIQUID TIGHT CONDUIT | 25 FT | |
| 3/4" LIQUID FLEXIBLE METAL CONDUIT SEAL RING | 4 | T&B 5263 |
| 3/4" LIQUID FLEXIBLE METAL CONDUIT FITTINGS, STR | 4 | T&B 5333 |
| DC POWER CABLES 8 AWG | 30 FT | THHN-BLK-8-STR |
| DC POWER CABLES 8 AWG | 30 FT | THHN-RD-8-STR |
| AC POWER CABLES 10 AWG | 30 FT | THHN-BLK-10-STR |
| AC POWER CABLES 10 AWG | 30 FT | THHN-WHT-10-STR |
| AC POWER CABLES 10 AWG | 30 FT | THHN-GRN-10-STR |
| AC POWER CABLES 10 AWG, PRE-CONNECTORIZED AT ONE END (FOR BATTERY CHARGER PLUG) | 30 FT | THHN-BLK-10-STR |
| AC POWER CABLES 10 AWG, PRE-CONNECTORIZED AT ONE END (FOR BATTERY CHARGER PLUG) | 30 FT | THHN-WHT-10-STR |
| AC POWER CABLES 10 AWG | 30 FT | THHN-GRN-10-STR |
| 6 AWG GREEN GROUND INSULATED CONDUCTOR | 6 FT | |
| M6 x 1.0 x 20 MM LONG STAINLESS STEEL HEX BOLT | 4 | |
| M6 STAINLESS STEEL LOCKWASHER | 4 | |
| M6 STAINLESS STEEL FLATWASHER | 4 | |
| 6 AWG TO 2AWG C-TAP CU | 2 | |
| 2 HOLE COMPRESSION LUG 6 AWG CU .75 CENTER TO CENTER | 2 | |
| INTRUSION ALARM CABLE, 18/20 AWG, 2 WIRES, (TO PARALLEL DOOR ALARMS TO PBC) | 30 FT | |
| HATCH PLATE WITH 2 CONDUIT KNOCKOUTS PRE-PUNCHED FOR 3/4" | 1 | |

Note

All conductors are copper, stranded, unless noted.

OnLine Power

REV A

B-4 PAD/ROOF MOUNTING KIT (P/N 9100-1245-01)

The optional mounting kit consist of two J-channel Brackets plus two Lifting Brackets and associated hardware (bolts, flat washers, and lock washers) to attached brackets to cabinet. When ordered with a PBC system the kit shall be installed on system.

| ITEM | DESCRIPTION | REV | QTY | REFERENCE |
|----------|--|-----|-----|-----------|
| 5001-616 | SMTL, PAD/ROOF MOUNTING CHANNEL | A | 2 | |
| 1800-351 | HRDW M10 X 25 MM, HEX HEAD BOLT, METRIC 18-SS | A | 4 | |
| 1825-074 | HDWR, M10 SS SPLIT LOCKWASHER | A | 4 | |
| 1825-083 | HRDW M10 WASHER, FLAT SS 18-8 STAINLESS METRIC | A | 4 | |

B-5 WALL/POLE MOUNTING KIT LIST 39 (P/N 9100-1247-01)

The optional mounting kit consist of side mounting hardware, including side panels, top plate, bottom plate, bolts, flat washers, lock washers, and screws to fasten the top and bottom plates to the sides for wall/pole mounting. The mounting bracket shall fit to the dimensions of the pole mounting hardware designed by Lucent Technologies. When ordered with a PBC system the kit shall be installed on the system.

| ITEM | DESCRIPTION | REV | QTY | REFERENCE |
|----------|--|-----|-----|-----------|
| 5001-617 | SMTL, WALL / POLE MTG. BRKT PBCII | A | 1 | |
| 1350-158 | HRDW. EYEBOLTS M16X2X27MM MC MASTER #3130T14 | A | 2 | |
| 1800-352 | HRDW M10 X 25 MM, HEX HEAD BOLT, METRIC 18-SS | A | 8 | |
| 1825-074 | HDWR, M10 SS SPLIT LOCKWASHER | A | 8 | |
| 1825-083 | HRDW M10 WASHER, FLAT SS 18-8 STAINLESS METRIC | A | 8 | |

OnLine Power

REV A

B-6 INSTALLATION KIT (15FT) /60 HZ (P/N 9100-1243)

The Installation Kit/60 Hz consists of conduits, fitting, and electrical power wires for connections to other cabinets that are separated up to 15 ft. The kit contains the following components:

| Kit Description | QTY | PART NO. |
|--|------------|-----------------|
| 3/4" FLEXIBLE LIQUID TIGHT CONDUIT | 75 FT | |
| 3/4" LIQUID TIGHT FLEXIBLE METAL CONDUIT SEAL RING | 10 | T&B 5263 |
| 3/4" LIQUID TIGHT FLEXIBLE METAL CONDUIT FITTINGS, STR | 10 | T&B 5333 |
| AC POWER CABLES 12 AWG | 80 FT | THHN-BLK-12-STR |
| AC POWER CABLES 12 AWG | 80 FT | THHN-WHT-12-STR |
| AC POWER CABLES 12 AWG | 80 FT | THHN-GRN-12-STR |
| 6 AWG GREEN GROUND INSULATED CONDUCTOR | 6 FT | |
| M6 x 1.0 x 20 MM LONG STAINLESS STEEL HEX BOLT | 4 | |
| M6 STAINLESS STEEL LOCKWASHER | 4 | |
| M6 STAINLESS STEEL FLATWASHER | 4 | |
| 6 AWG TO 2 AWG C-TAP CU | 2 | |
| 2 HOLE COMPRESSION LUG 6 AWG CU .75 CENTER TO CENTER | 2 | |
| 3/4" METAL CLAMP | 6 | |
| CONNECTOR | 1 | HEYCO P/N 3214 |
| ALARM CABLE, SOLID #24 AWG, DB 9, 20 FT. | 1 | |

Note

1. Interconnection hardware between the UPS and service entrance is not included in this kit.
2. All conductors are stranded, copper, unless noted.

OnLine Power

REV A

B-7 INSTALLATION KIT (50FT) /60 HZ (P/N 9100-1244)

The Installation Kit/60 Hz consists of conduits, fitting, and electrical power wires for connections to other cabinets that are separated up to 50 ft. The Kit contains the following components:

| Kit Description | QTY | PART NO. |
|--|--------|-----------------|
| 3/4" FLEXIBLE LIQUID TIGHT CONDUIT | 125 FT | |
| 3/4" FLEXIBLE LIQUID TIGHT CONDUIT | 100 FT | |
| 3/4" LIQUID TIGHT FLEXIBLE METAL CONDUIT SEAL RING | 10 | T&B 5263 |
| 3/4" LIQUID TIGHT FLEXIBLE METAL CONDUIT FITTINGS, STR | 10 | T&B 5333 |
| AC POWER CABLES 12 AWG | 200 FT | THHN-BLK-12-STR |
| AC POWER CABLES 12 AWG | 200 FT | THHN-WHT-12-STR |
| AC POWER CABLES 12 AWG | 200 FT | THHN-GRN-12-STR |
| 6 AWG GREEN GROUND INSULATED CONDUCTOR | 6 FT | |
| M6 x 1.0 x 20 MM LONG STAINLESS STEEL HEX BOLT | 4 | |
| M6 STAINLESS STEEL LOCKWASHER | 4 | |
| M6 STAINLESS STEEL FLATWASHER | 4 | |
| 6 AWG TO 2 AWG C-TAP CU | 2 | |
| 2 HOLE COMPRESSION LUG 6 AWG CU .75 CENTER TO CENTER | 2 | |
| 3/4" METAL CLAMP | 6 | |
| CONNECTOR | 1 | HEYCO P/N 3214 |
| ALARM CABLE, SOLID #24 AWG, DB 9, 20 FT. | 1 | |

Note

1. Interconnection hardware between the UPS and service entrance is not included in this kit.
2. All conductors are stranded, copper, unless noted.

Appendix C: BATTERY MAINTENANCE TESTING & SPECIFICATIONS

Battery Specifications

- Battery Impedance - The battery impedance value is measured @ 25°C. This value is for new batteries at full state of charge, on open circuit at a frequency of 30 Hz. Battery type PRC - 12120X Impedance is 5.05 milliohms.
- Float Voltage - The specified float voltage “window” is 2.27 - 2.30 V.P.C. @ 25°C. This Value will help in reducing recharge times and keeping the batteries at the highest state of charge.

Recommended Procedures

These methods are designed to be used on a battery system installed for a minimum period of 6 month, in a steady state of Float condition and not under conditions of high current recharge or discharge.

Measure Float Voltage

- When the Low Battery LED is “ON” over 24 hours test system, remove the Battery Tray Plug from the battery jack on the Electronic Tray, so readings can be taken.
- Measure and record system voltage directly across the battery plug.
- If the battery system is determined to be low voltage system after 24 hours of charging the system voltage will be only 3% low, remove and replace the Battery Tray.

Battery Servicing

- Measure and record a 10% sample of individual battery temperatures at the negative terminal post.
- Identify batteries that are greater than 3°C above ambient from the calculated average. If no external causes for higher battery temperatures are noted.
- Check that the filters are clean and Fans are operational.
- If no change is noted, remove and replace the Battery Tray.

Visual Inspections

- Examine batteries for any abnormalities in end wall bulge, post leakage, cover to cells leakage, etc.
- Identify any end wall bulges that exceed 1/2 inches compared to the other batteries in tray.

OnLine Power

REV A

Load Testing

- Load Testing shall only be performed as a bench test.
- While on open circuit, place 100 amp load across each battery for a period of 30 seconds.
- Measure and record end of discharge (E.O.D.) voltage at 30 seconds.
- Calculate average and compare results against value of 10.95 for Type PRC 12120X E.O.D. @ 30 Seconds and 100 amp load.
- If calculated average E.O.D. of group is observed as being normal, identify and replace individual batteries with values that are 10% less than the group average.

General Equipment Requirements

- Digital voltmeter- 3 1/2 digit, minimum 0.25% accuracy.
- Load tester (100 amps) with digital voltage readout, minimum 0.25% accuracy.
- Thermometer- thermocouple, contact type, 1 0 C accuracy.

Battery Date Coding

- The manufacturer stamps the Negative terminal post of the battery, with the month and year date code.
- Shelf life is based on normal storage temperature conditions, 66°F ~ 90°F, and requires recharging every 6 months from the last full charge date.



BATTERY SHELF TIME, WHEN STORED UNDER TEMPERATURE CONDITIONS OF 66°F ~ 90°F, IS FIVE (5) MONTHS MAXIMUM AFTER THE SHIP DATE.

BATTERY MUST BE RECHARGED AFTER THIS DATE OTHERWISE THEY WILL BE DAMAGED.

THE SHIP DATE IS PART OF THE SERIAL NUMBER,

EXAMPLE S/N 00 L7 02 00####

YEAR MONTH UNIT I.D. NUMBER

OnLine Power

REV A

Appendix D: TROUBLESHOOTING

| Item | Problem | Cause | Remedy |
|------|---|--|--|
| 1 | Unit does not start | 1) Input not present. | 1) Apply the input power by closing the feeder or wall breaker. 2) Measure and verify that the input voltage is correct, IF correct turn the input breaker CB 1, to "ON". 3) Verify Green LED, "AC" is "ON" |
| | | 2) Input is not connected properly | 1) Measure and Verify that the input voltage is on the correct terminals of TB 1. 2) See Section 3-11, Electronic Tray, input & output wiring for the correct terminals. |
| 2 | Unit is very quiet, no noise Review this function | Fan or fans are not running. | 1) With CB1 "OFF" remove electronic tray, check on the left side if the fan rotors are free to turn. If jammed replace Electronic tray. 2) Check if the fan wires are connected. 3) Verify Input power as in Item #1. |
| 3 | Unit shuts-off, immediately or within few minutes of input power failure. | 1) Battery Tray not connected or Battery Breaker CB 9 "OFF". | 1) Verify red, black plug, P2, from Battery Tray is properly connected into battery jack, J2 at Electronic tray 2) Verify battery breaker, CB9 on front of Battery tray is "ON". |
| | | 2) Batteries are discharged. | 1) Verify if the Red LED, "Low Battery" Warning is "ON". Run the unit for over 24 hours to bring the batteries up to proper charge. 2) Verify if the Green LED's Battery Voltage indicators, "HB" to "FB" are "ON". Run the unit for over 24 hours to bring the batteries up to proper charge. |
| | | 3) Batteries are discharged. | 1) Verify by disconnecting the Battery Plug, P2, from Electronic Tray Jack, J2, & measure that the DC Voltage at the Plug with CB 9 "ON" is correct. 2) Red to Black terminal shall be 96.0 VDC from the Battery Tray. 3) Measure the Electronic Tray Jack, J2 has the correct DC voltage with no load. 4) Red to Black terminal shall be 108 VDC at the Electronic Tray. J2 Voltage low then replace the Electronic Tray. 5) Run the unit for over 24 hours to bring the batteries up to proper charge. |
| | | 4) Bad Batteries. | 1) Verify by measuring the DC Voltage at the Battery Plug, P2, has changed after 24 hours of charging. 2) Red to Black terminal shall be 80.0 VDC REPLACE BATTERIES. |

OnLine Power

REV A

Appendix D: TROUBLESHOOTING (continued)

| Item | Problem | Cause | Remedy |
|------|------------------------|---|---|
| 4 | Red lights on the unit | 1) "SUMMARY ALARM" Red light is "ON" | 1) See Appendix E "Summary of all alarms and function". |
| | | 2) "LB" Red light is "ON" | 1) Batteries have been discharged to a low battery level condition. Very little or No back-up power is available in case of sustained or future input failures. 2) Run the unit for over 24 hours to bring the batteries up to proper charge. 3) See Appendix E "Summary of all alarms and function". |
| | | 3) "OL" Red light is "ON" | 1) Unit has exceeded it's full load capacity and is Overload condition. Reduce the output load. 2) Unit has auto shut down mode and will turn "OFF" after 30 seconds. 3) See Appendix E "Summary of all alarms and function". |
| 5 | No Output. | 1) Output is not connected properly or Main Output Breaker CB2 and CB4, 5, 6, 7, are OFF. | 1) Turn output breaker CB2, and CB4-7 to "ON". 2) Measure and verify output voltage on the corresponding terminals of TB1. 3) See Section 3, Electronic Tray, input & output wiring for the correct terminal. |

Appendix E: SUMMARY OF ALL ALARMS AND FUNCTIONS

| ALARM Condition | AC MODE | | DC MODE | | CUSTOMER ACTION |
|---|---|---|---|--|--|
| | ALARMS | OUTPUT | ALARMS | OUTPUT | |
| Over-temperature (above 90°C) | 1) "Summary Alarm" LED ON 2) "Bypass ON" and AC INPUT ON" LED ON 3) DB9 Connector (pin 3 to 5) contact closes for "Summary Alarm" | 1) Output is NORMAL and supplied from UPS 2) Auto Bypass circuit may supply output power, in case of internal failures | 1) "Summary Alarm" LED ON 2) "Bypass ON" and AC INPUT ON" LED is OFF 3) DB9 Connector (pin 3 to 5) contact closes for "Summary Alarm" | 1) Not Available 2) Unit is shut-down | <p>For AC MODE</p> 1) Open the door. Remove the front dead panel. Pull the electronic tray partially. Check wiring and temperature. 2) If all okay, put the unit back. Open & close all CBs. 3) Restart the unit to see if the unit is coming up normal. 4) If problem exists, replace electronic tray. |
| Overload At the output (over 120% thru 160% of nominal output load) | 1) "Summary Alarm" LED ON 2) "Overload" LED ON 3) "Bypass" LED OFF 4) DB9 Connector (pin 3 to 5) contact closes for "Summary Alarm" 5) The unit shut-down in 10-12 seconds. | 1) Auto Bypass circuit supplies output power 2) Output CBs may not trip, for 120% through 160%. 3) Output CBs trip for over 160%. | 1) "Summary Alarm" LED ON 2) "Overload" LED ON 3) DB9 Connector (pin 3 to 5) contact closes for "Summary Alarm" 4) The unit shuts down 5) "Bypass ON" and AC INPUT ON" LED is OFF | No output available | <p>For AC MODE</p> 1) Check "Overload" LED is ON. 2) OPEN all circuit breakers and restart the unit by closing breakers CB1 and CB9, or by pressing S1 & S2 on the display board.* 3) If "Overload" LED is still ON without output CB closed, then replace the electronic tray. 4) Reduce the load if "Overload" LED comes ON only with output breaker closed and with load. |
| | | | | | <p>FOR DC MODE</p> 1) Open all CBs and restart the unit by closing CB1 & CB9, or by pressing S1 & S2 on the display board.* 2) Close output CB to see if "Overload" LED is still ON or OFF. 3) If "Overload" LED is still ON, reduce the load. 4) Then open the Input CB to see "Overload" LED does not come ON. 5) If still "Overload" LED comes ON, then replace the electronic tray. |

* Hold S2 switch for 5 seconds to restart the PBC unit successfully from the display board.

OnLine Power

REV A

Appendix E: SUMMARY OF ALL ALARMS AND FUNCTIONS (continued)

| ALARM Condition | AC MODE | | DC MODE | | CUSTOMER ACTION |
|--|--|---|---|-------------------------|---|
| | ALARMS | OUTPUT | ALARMS | OUTPUT | |
| Over-voltage (122 Volts DC at Battery charger) | 1) "Summary Alarm" LED ON for 20 seconds. 2) DB9 Connector (pin 3 to 5) contact closes for "Summary Alarm" 3) The unit shuts down immediately. 4) Battery Green LEDs flash 5) "On Bypass" Green LED ON for 20 seconds. | 1) Auto Bypass circuit supplies output power. | This alarm condition does not occur in DC mode | Not affected | For AC MODE 1) OPEN all CBs 2) Restart the unit by closing all breakers and observe the unit is running okay for few minutes. 3) If unit shuts down again by "Summary Alarm", replace the electronic tray. |
| Short Circuit at output | 1) No Alarms 2) Output CBs trip. Input CB may trips. 3) Same as overload condition and output CB trips | Not available | 1) "Overload" LED ON 2) "Summary" alarm LED ON 3) DB9 Connector (pin 3 to 5) contact closes for "Summary Alarm" 4) The unit shuts down | Not available | For AC MODE 1) OPEN all CBs 2) Restart the unit by closing all breakers. 3) Close Output CBs and if trip again, check the output impedance for short circuit. 4) When load is reduced and the Output CB still-trips, replace the Output CB or replace electronic tray. FOR DC MODE 1) OPEN all CBs. 2) Restart the unit by closing all breakers, or by pressing S1 & S2 on the display board.* 3) Close Output CBs to see trip again. If trip, check the short circuit or reduce load. 4) If the Unit still trips, then replace the electronic tray. |
| Low Battery | "Low Battery" LED ON | Normal output available | "Low Battery" LED ON | Normal output available | For AC MODE 1) Check Batteries or Battery/Charger. If battery is okay, replace the B/C or electronic tray. FOR DC MODE 1) This indicates that battery's voltage is decreasing down to near the shut down point. Be prepare to shut down the unit because the battery will only support the load for a short time now. |

* Hold S2 switch for 5 seconds to restart the PBC unit successfully from the display board.